


EZO-ECTM

Embedded Conductivity Circuit

Reads	Conductivity = $\mu\text{S}/\text{cm}$ Total dissolved solids = ppm Salinity = PSU (ppt) 0.00 – 42.00 Specific gravity <i>(sea water only)</i> = 1.00 – 1.300
Range	0.07 – 500,000+ $\mu\text{S}/\text{cm}$
Accuracy	+/- 2%
Response time	1 reading per sec
Supported probes	K 0.1 – K 10 any brand
Calibration	1 or 2 point
Temp compensation	Yes
Data protocol	UART & I²C
Default I ² C address	100 (0x64)
Operating voltage	3.3V – 5V
Data format	ASCII

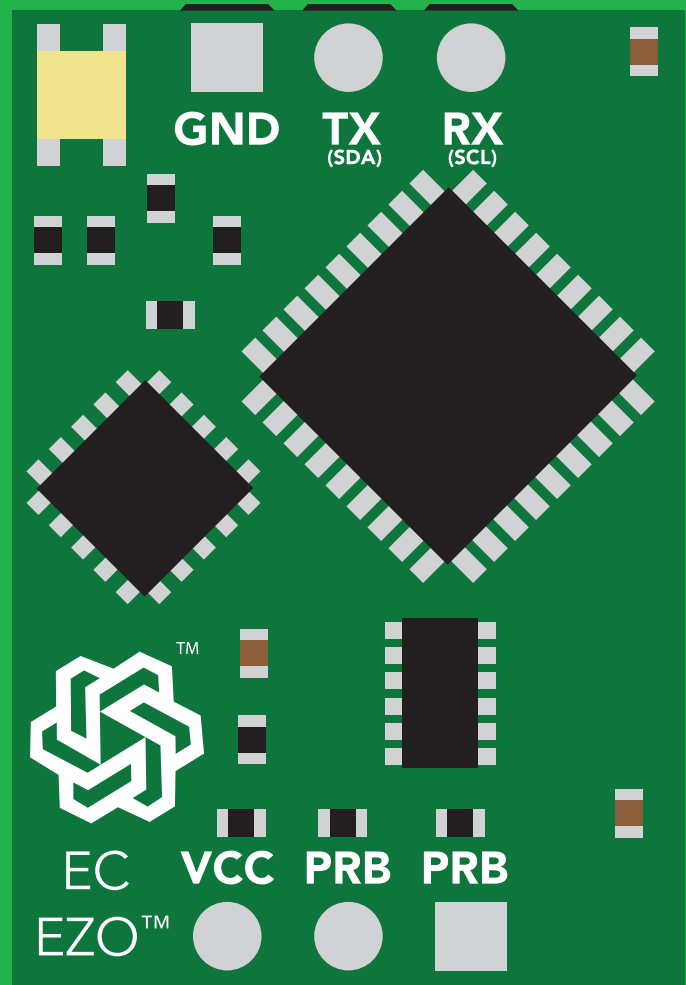

PATENT PROTECTED




STOP

SOLDERING THIS DEVICE VOIDS YOUR WARRANTY.

This is sensitive electronic equipment. Get this device working in a solderless breadboard first. Once this device has been soldered it is no longer covered by our warranty.

This device has been designed to be soldered and can be soldered at any time. Once that decision has been made, Atlas Scientific no longer assumes responsibility for the device's continued operation. The embedded systems engineer is now the responsible party.

Get this device working in a solderless breadboard first!

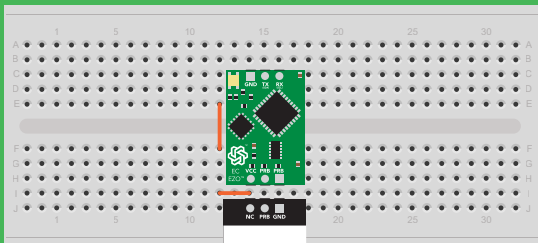

Do not embed this device without testing it in a solderless breadboard!

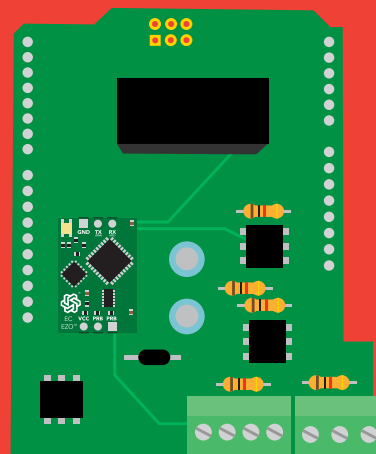


Table of contents

Circuit dimensions	4	Output units	8
Power consumption	4	Power and data isolation	9
Absolute max ratings	4	Correct wiring	11
Conductivity probe range	5	Calibration theory	12
Resolution	6	Default state	17
Operating principle	7	Available data protocols	18

UART


UART mode	20
Receiving data from device	21
Sending commands to device	22
LED color definition	23
UART quick command page	24
LED control	25
Find	26
Continuous reading mode	27
Single reading mode	28
Calibration	29
Change TDS conversion factor	30
Export calibration	31
Import calibration	32
Setting the probe type	33
Temperature compensation	34
Enable/disable parameters	35
Naming device	36
Device information	37
Response codes	38
Reading device status	39
Sleep mode/low power	40
Change baud rate	41
Protocol lock	42
Factory reset	43
Change to I ² C mode	44
Manual switching to I ² C	45

I²C

I ² C mode	47
Sending commands	48
Requesting data	49
Response codes	50
LED color definition	51
I²C quick command page	52
LED control	53
Find	54
Taking reading	55
Calibration	56
Change TDS conversion factor	57
Export calibration	58
Import calibration	59
Setting the probe type	60
Temperature compensation	61
Enable/disable parameters	62
Naming device	63
Device information	64
Reading device status	65
Sleep mode/low power	66
Protocol lock	67
I ² C address change	68
Factory reset	69
Change to UART mode	70
Manual switching to UART	71

Circuit footprint	72
Datasheet change log	73
Warranty	77

EZO™ circuit dimensions

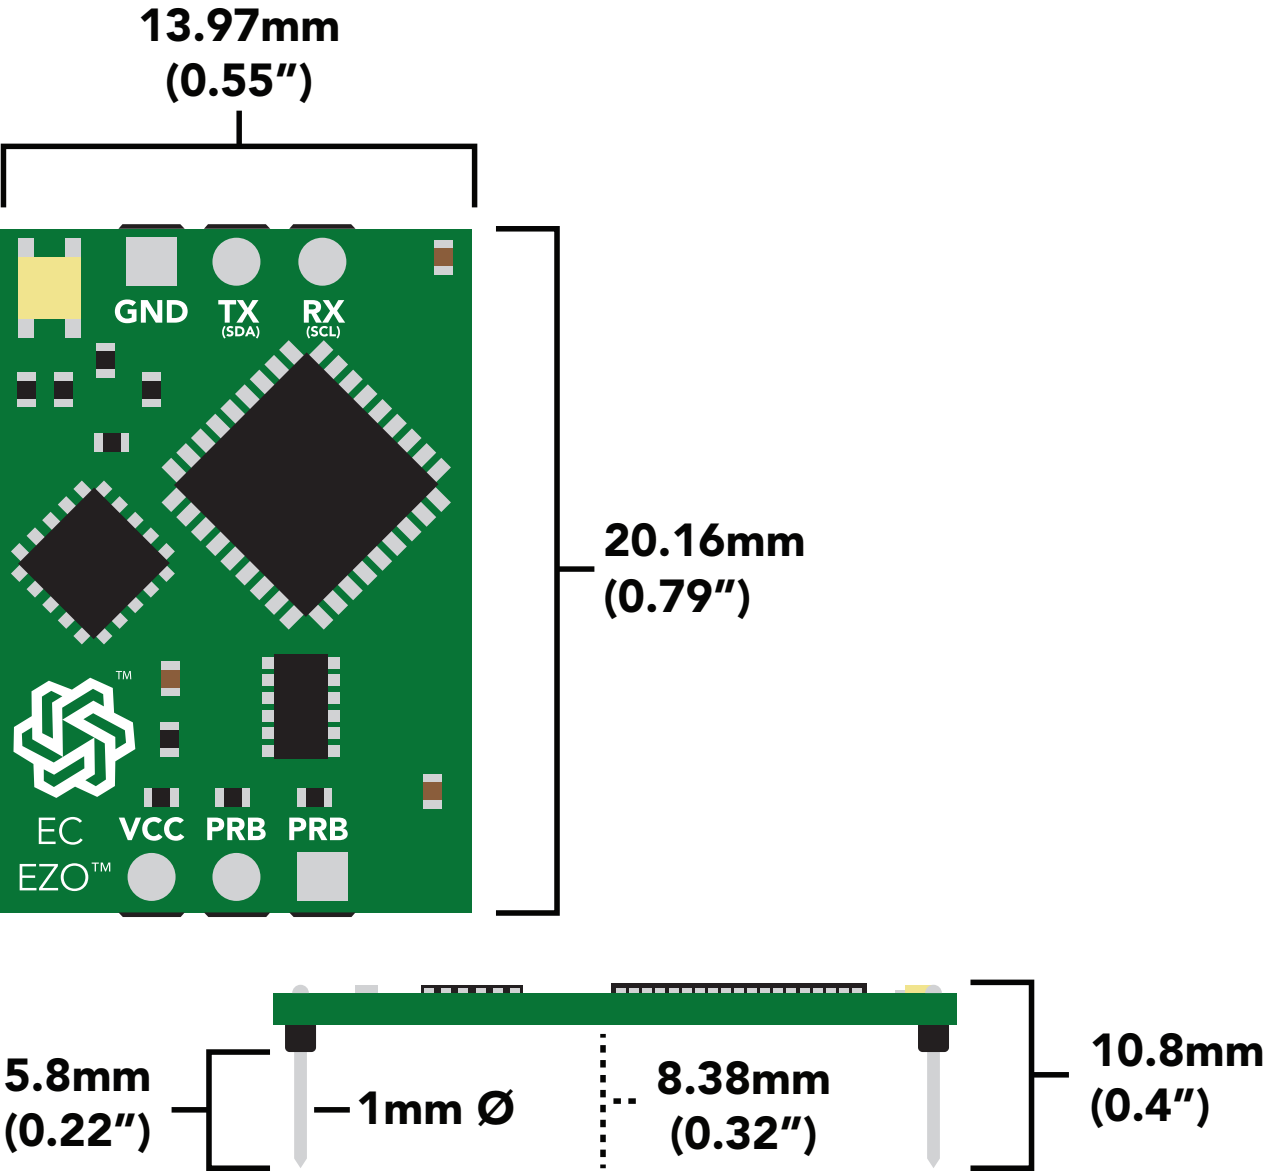

Power consumption

	LED	MAX	STANDBY	SLEEP
5V	ON	50 mA	18.14 mA	0.7 mA
	OFF	45 mA	15.64 mA	
3.3V	ON	35 mA	16.85 mA	0.4 mA
	OFF	34 mA	15.85 mA	

Absolute max ratings

Parameter	MIN	TYP	MAX
Storage temperature (EZO™ Conductivity)	-60 °C		150 °C
Operational temperature (EZO™ Conductivity)	-40 °C	25 °C	125 °C
VCC	3.3V	5V	5.5V

Conductivity probe range

The EZO™ Conductivity circuit is capable of connecting to any two-conductor conductivity probe, ranging from:

K 0.01



K 10

Atlas Scientific™ has tested three different K value probe types:

K 0.1



accurate reading range

0.07 μ S/cm – 50,000 μ S/cm

TDS (ppm) 0 – 25,000

Salinity (ppt) 0 – 33

K 1.0



accurate reading range

5 μ S/cm – 200,000+ μ S/cm

TDS (ppm) 2 – 100,000

Salinity (ppt) 0 – 42*

**salinity scale cannot go any higher*

K 10



accurate reading range

10 μ S/cm – 1S/cm

TDS (ppm) 5 – 500,000

Salinity (ppt) 0 – 42*

**salinity scale cannot go any higher*

Atlas Scientific™ does not know what the accurate reading range would be for conductivity probes, other than the above mentioned values. Determining the accurate reading range of such probes, i.e. **K 2.6**, or **K 0.66**, is the responsibility of the embedded systems engineer.

Resolution

The EZO™ Conductivity circuit, employs a method of scaling resolution. As the conductivity increases the resolution between readings decreases.

The EZO™ Conductivity circuit will output conductivity readings where the first **4 digits** are valid and the others are set to 0. This excludes conductivity readings that are less than 9.99. In that case, only 3 conductivity digits will be output.

0.07 – 99.99

Resolution = **0.01µS/cm**

100.1 – 999.9

Resolution = **0.1µS/cm**

1,000 – 9,999


Resolution = **1.0µS/cm**

10,000 – 99,990

Resolution = **10µS/cm**

100,000 – 999,900



Resolution = **100µS/cm**

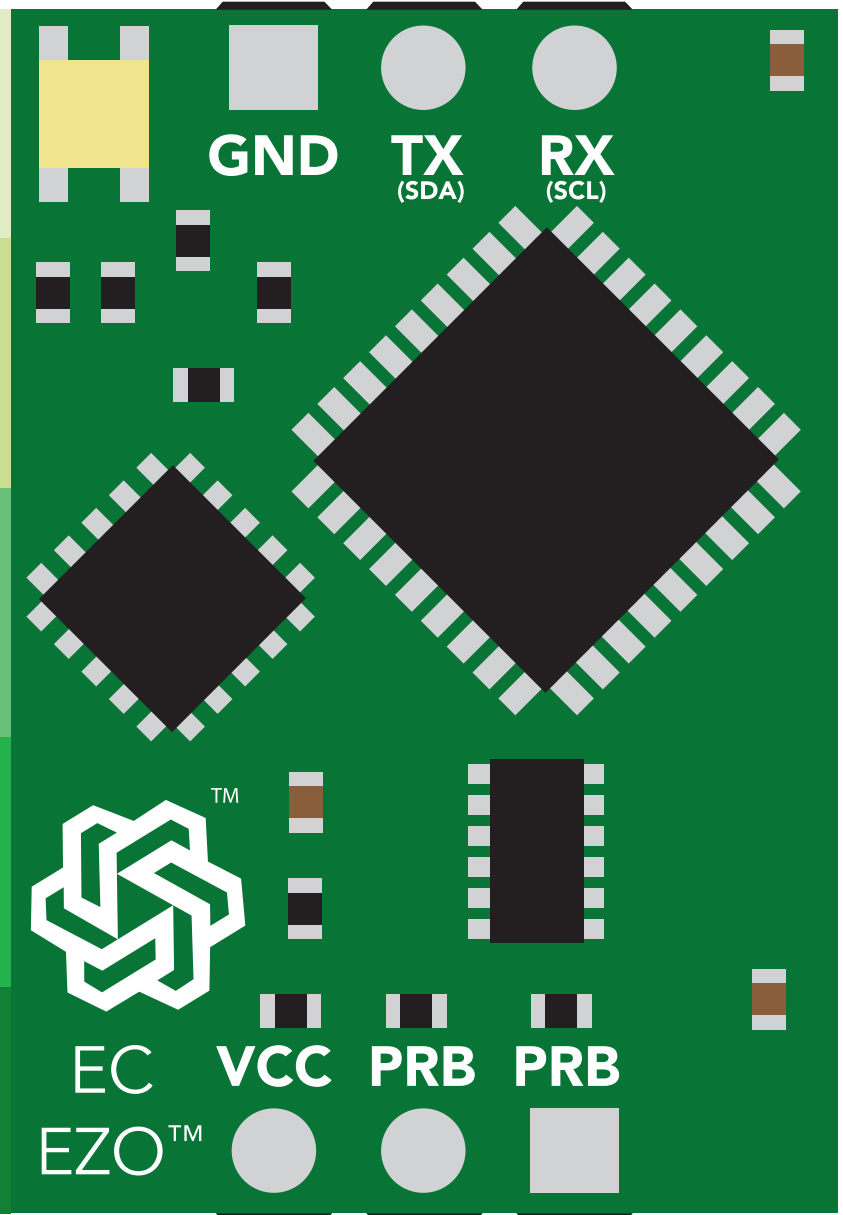


Operating principle

An E.C. (**electrical conductivity**) probe measures the electrical conductivity in a solution. It is commonly used in hydroponics, aquaculture and freshwater systems to monitor the amount of nutrients, salts or impurities in the water.


Inside the conductivity probe, two electrodes are positioned opposite from each other, an AC voltage is applied to the electrodes causing cations to move to the negatively charged electrode, while the anions move to the positively charged electrode. The more free electrolyte the liquid contains, the higher the electrical conductivity.

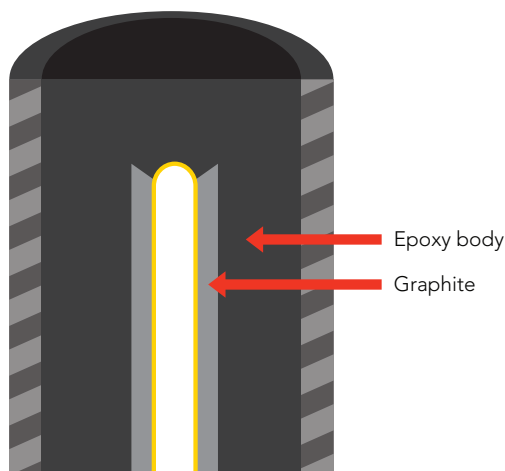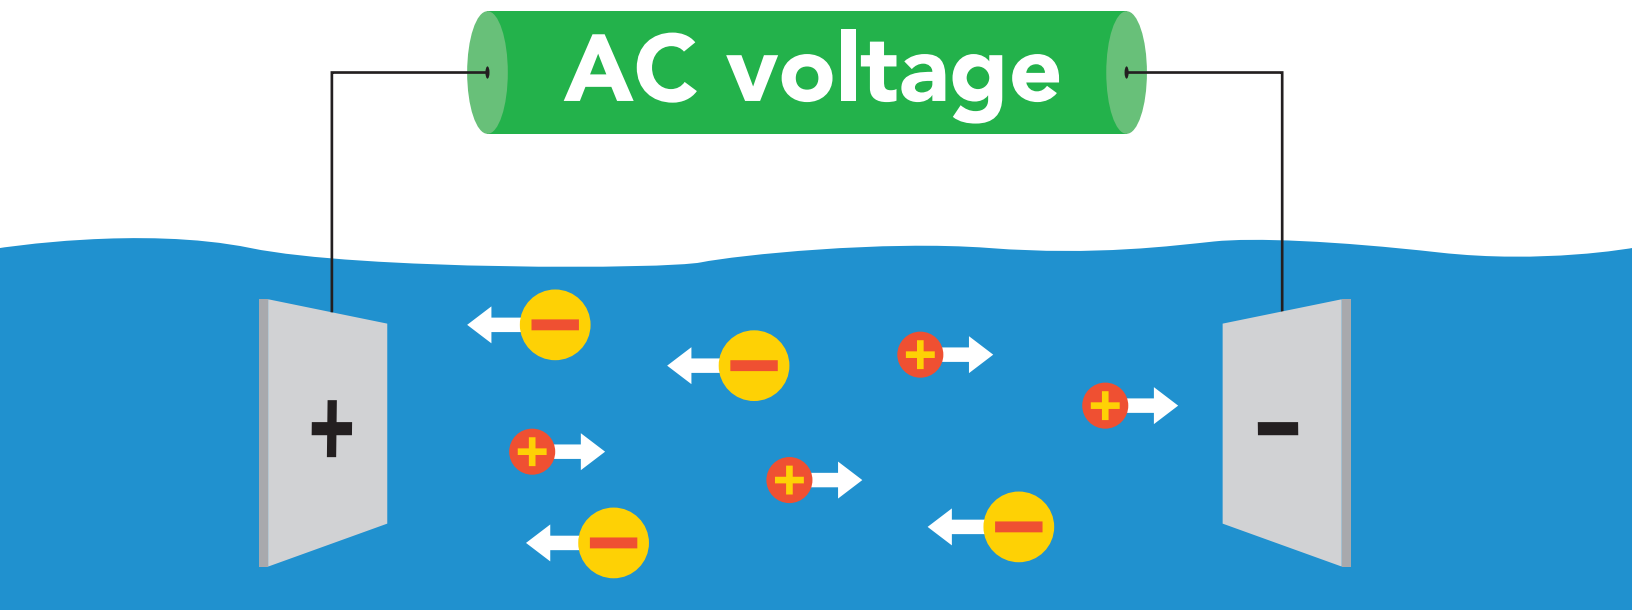

K 0.1
Graphite electrode

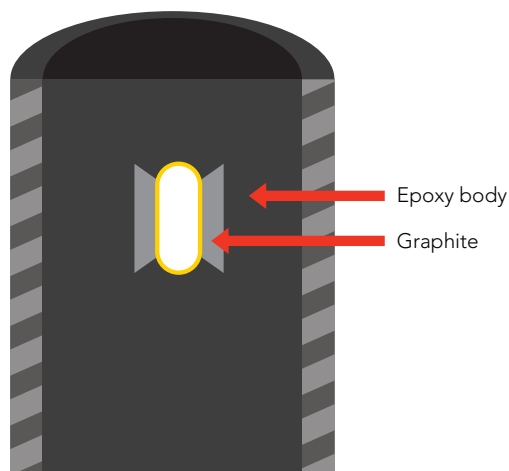

K 1.0
Graphite electrode

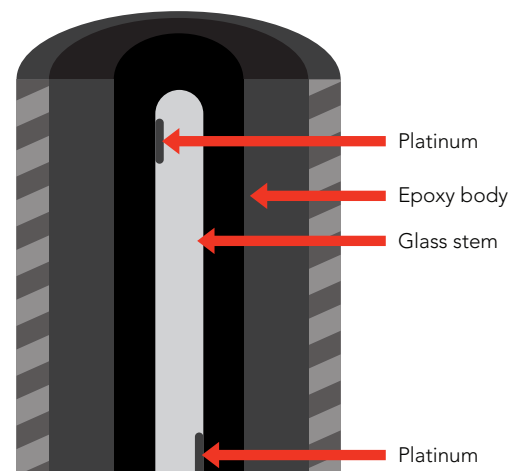

K 10
Platinum electrode

Output units

By default, EZO™ Conductivity circuits with firmware version 2.10 and above will **only** output EC. To enable these parameters see page 35 for UART, and 62 for I²C.

The EZO™ Conductivity circuit also has the capability to read:

Conductivity = $\mu\text{S}/\text{cm}$

Total dissolved solids = ppm

Salinity = PSU (ppt) 0.00 – 42.00

Specific gravity (sea water only) = 1.00 – 1.300

These parameters must be individually enabled within the device. See page 35 to enable each parameter in UART mode, and on page 62 for I²C mode.

Once these parameters have been enabled, output will be a CSV string.


Example

EC,TDS,SAL,SG

Default LED blink pattern

This is the LED pattern for Continuous Mode (*default state*)

This can only happen when the device is in **UART** mode.

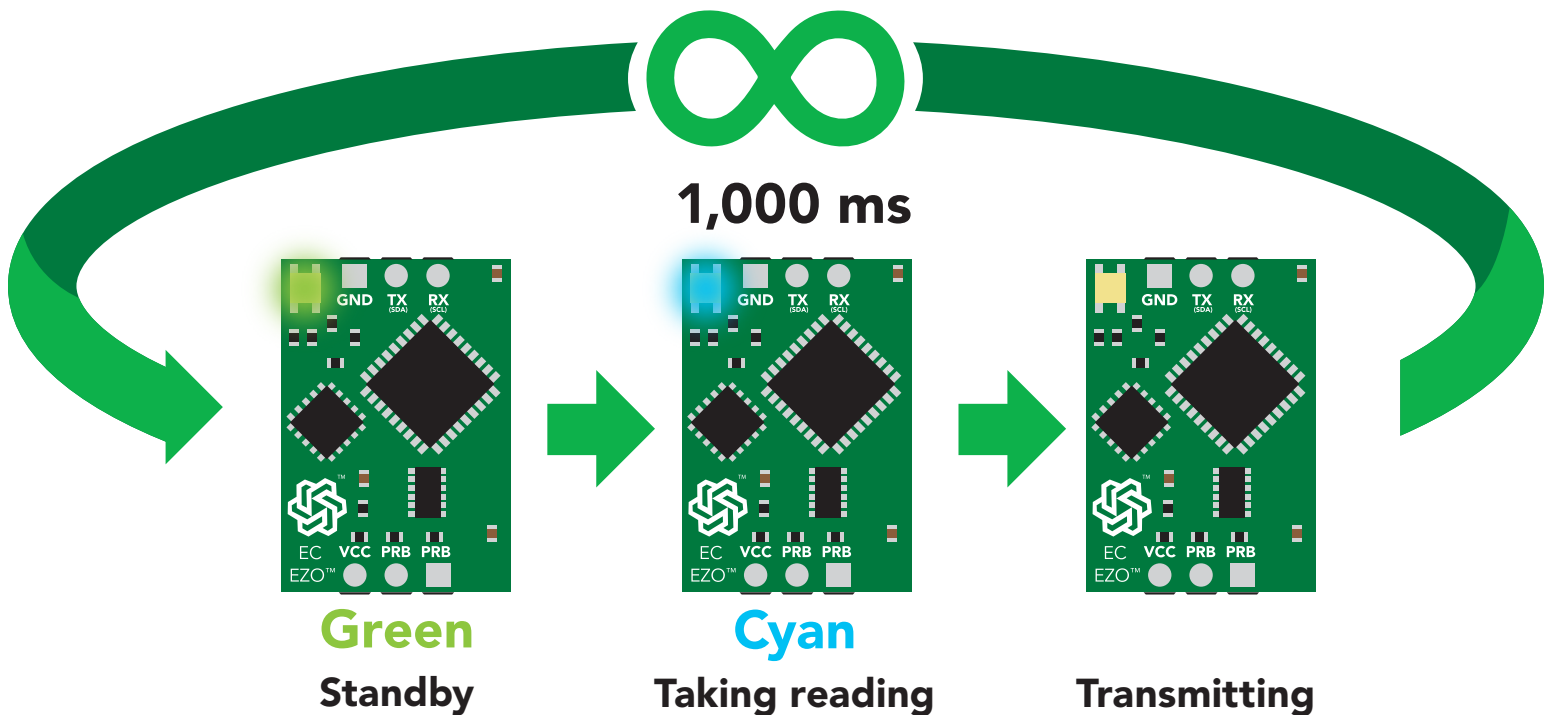


Power and data isolation

The Atlas Scientific EZO™ Conductivity circuit is a very sensitive device. This sensitivity is what gives the Conductivity circuit its accuracy. This also means that the Conductivity circuit is capable of reading micro-voltages that are bleeding into the water from unnatural sources such as pumps, solenoid valves or other probes/sensors.


When electrical noise is interfering with the Conductivity readings it is common to see rapidly fluctuating readings or readings that are consistently off. To verify that electrical noise is causing inaccurate readings, place the Conductivity probe in a cup of water by itself. The readings should stabilize quickly, confirming that electrical noise was the issue.



When reading from two EZO™ Conductivity circuits, it is **strongly recommended** that they are electrically isolated from each other.

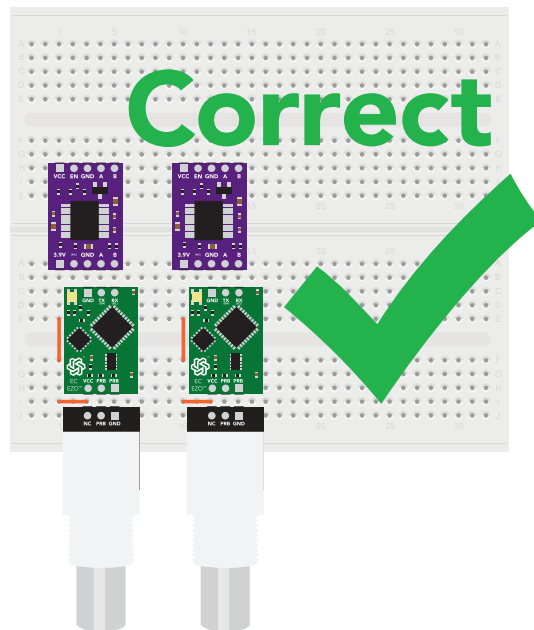

Basic EZO™
Inline Voltage Isolator

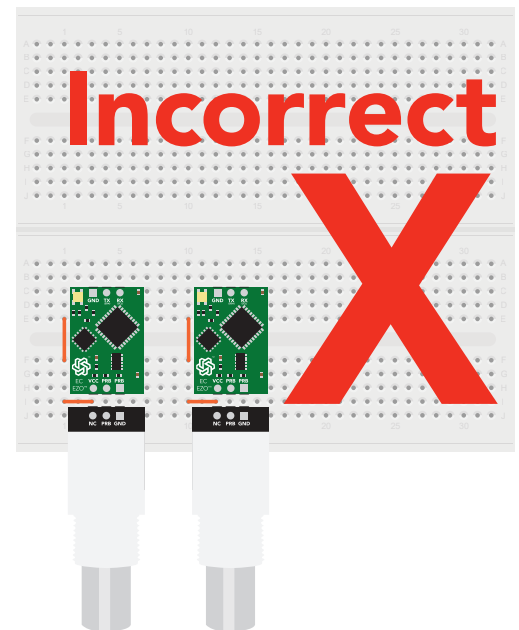


Without isolation, Conductivity readings will effect each other.

This schematic shows exactly how we isolate data and power using the and a few passive components. The ADM3260 can output isolated power up to 150 mW and incorporates two bidirectional data channels.

This technology works by using tiny transformers to induce the voltage across an air gap. PCB layout requires special attention for EMI/EMC and RF Control, having proper ground planes and keeping the capacitors as close to the chip as possible are crucial for proper performance. The two data channels have a 4.7k Ω pull up resistor on both the isolated and non-isolated lines (R1, R2, R3, and R4) The output voltage is set using a voltage divider (R5, R6, and R7) this produces a voltage of 3.9V regardless of your input voltage.

Isolated ground is different from non-isolated ground, these two lines should not be connected together.


VCC = 3.0v – 5.5v

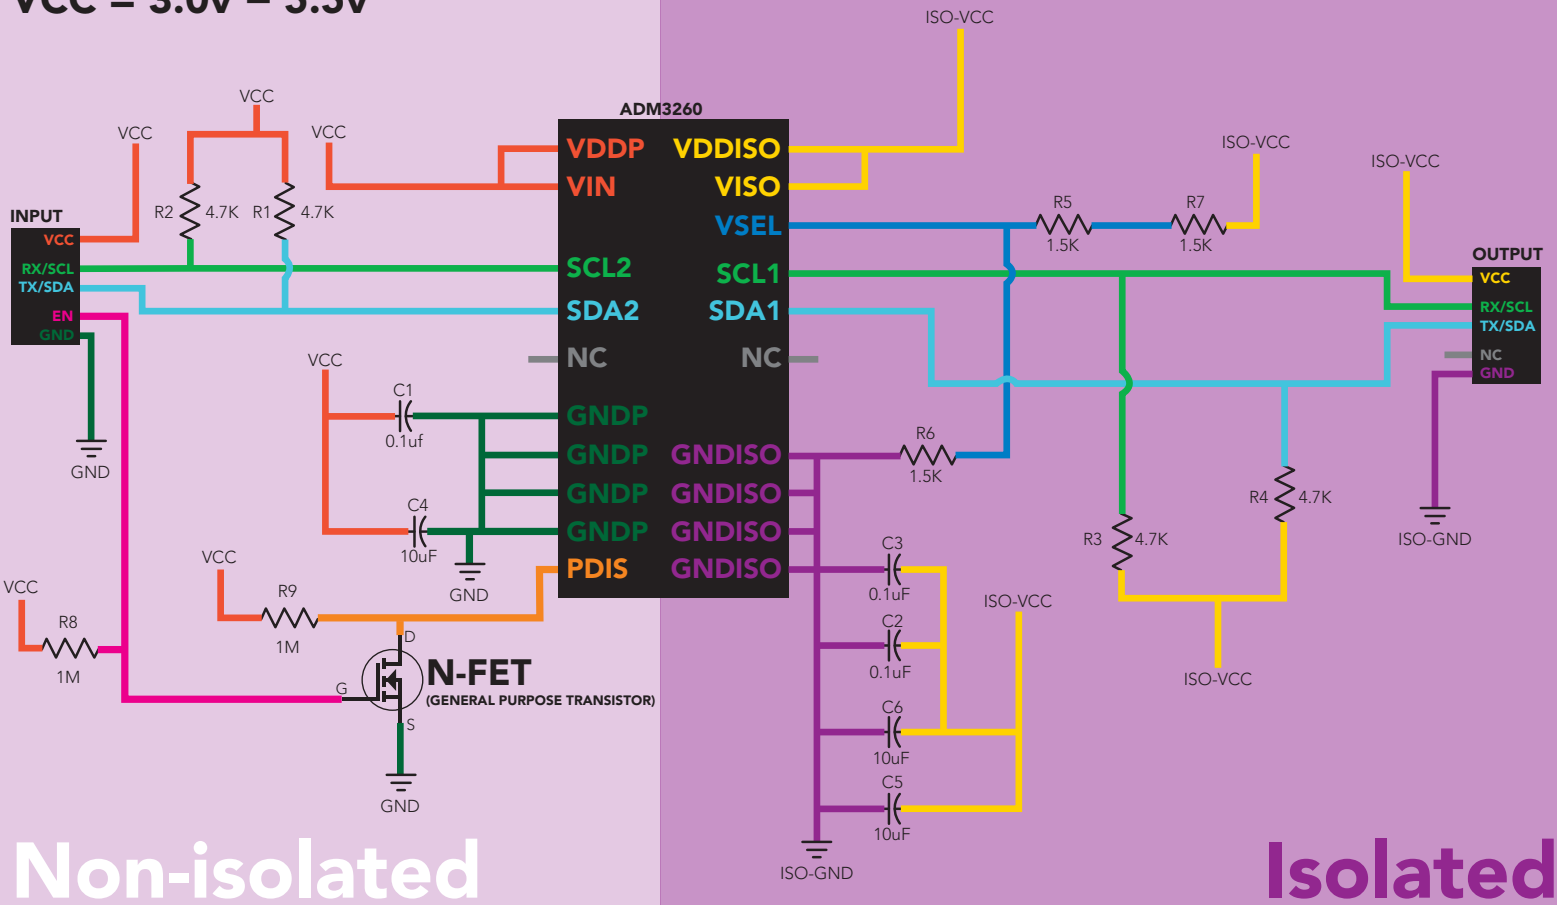




Correct wiring

Bread board

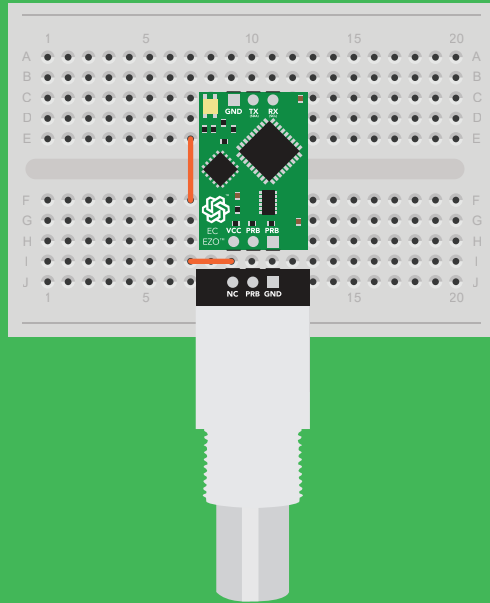


Bread board via USB

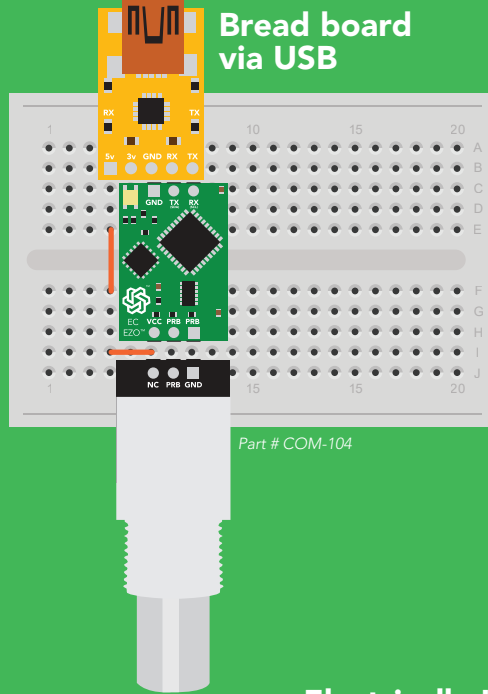


Part # COM-104

Carrier board

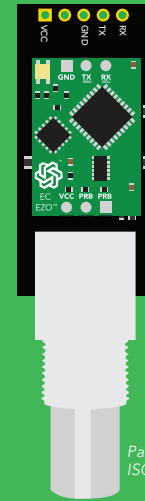


Part # ISCCB

USB carrier board

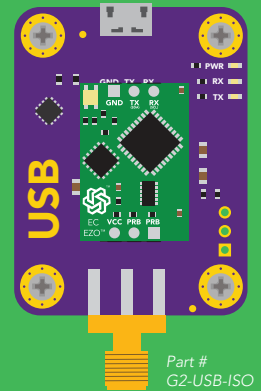

Part # G2-USB-ISO

Electrically Isolated EZO™ Carrier Board

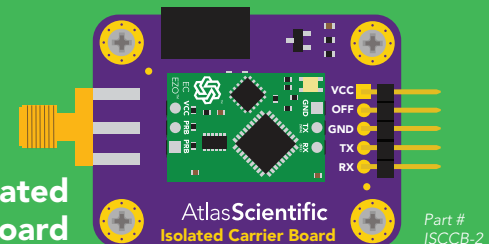


Part # ISCCB-2




Incorrect wiring


Extended leads

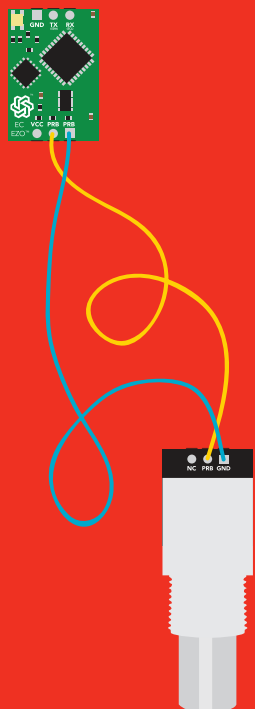


Sloppy setup

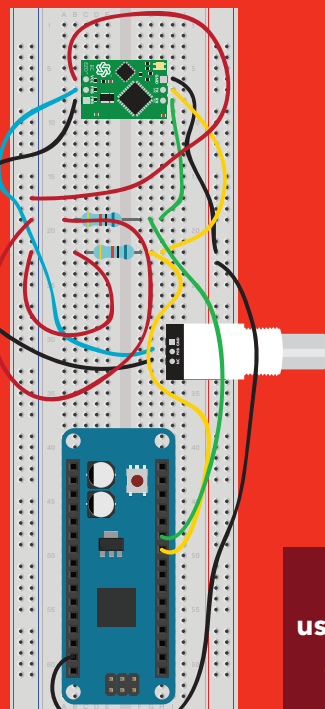

Perfboards or Protoboards

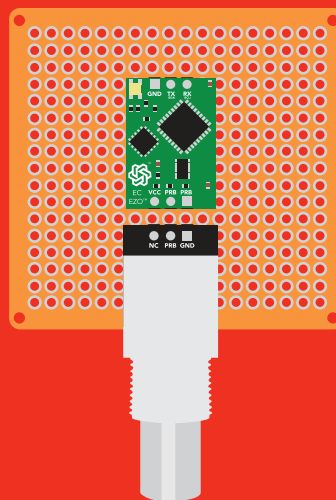

*Embedded into your device

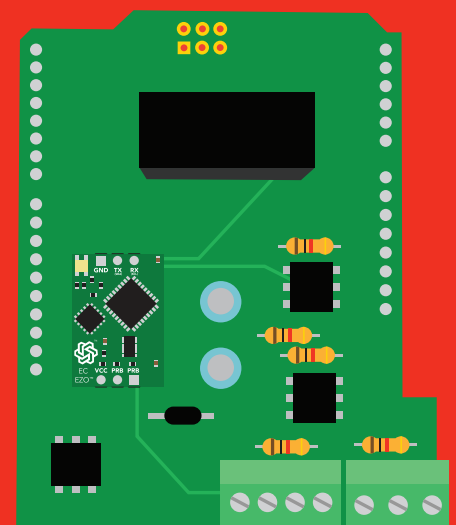

NEVER
use Perfboards or Protoboards
Flux residue and shorting wires make it very hard to get accurate readings.

***Only after you are familiar with EZO™ circuits operation**

Calibration theory

Simple calibration


UART mode

Continuous readings

Advanced calibration

I²C mode

Continuously request readings

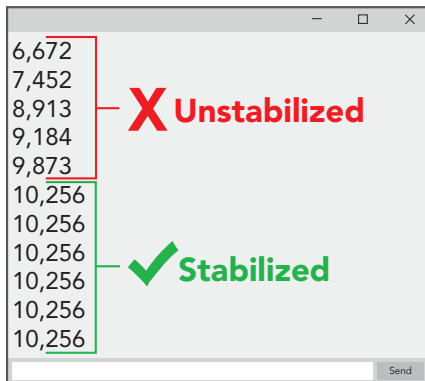


The most important part of calibration is watching the readings during the calibration process.

It's easiest to calibrate the device in its default state (UART mode, with continuous readings enabled).


Switching the device to I²C mode after calibration **will not** affect the stored calibration. If the device must be calibrated in I²C mode be sure to **continuously request readings** so you can see the output from the probe.

1. Pre-calibration setup

Connect the dry conductivity probe and take continuous readings.

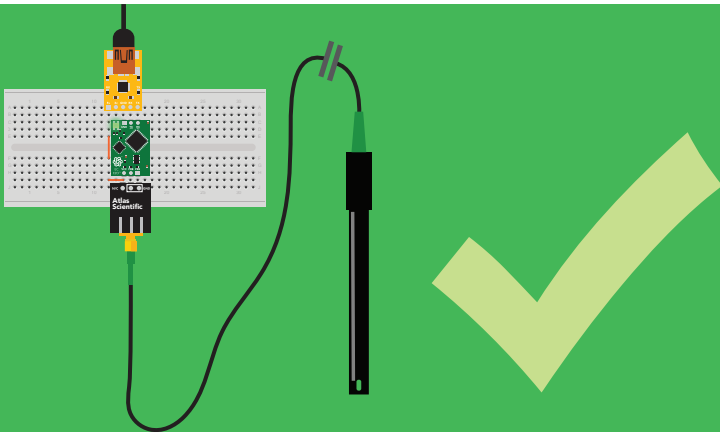

A simple hardware configuration with dry probe.

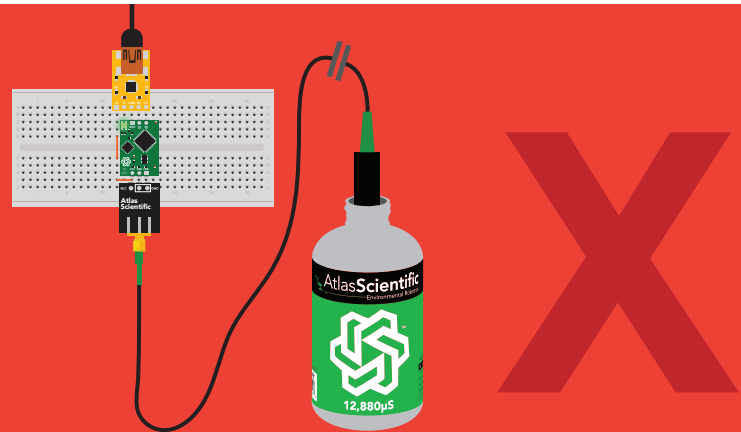

Not yet! Do not put the probe into calibration solution.

2. Set probe type

If your probe $\neq$ K 1.0 (*default*), then set the probe type by using the "**K,n**" command. (where n = K value of your probe) for more information, see page [33](#) or [60](#).

3. Dry calibration

Perform a dry calibration using the command **"Cal,dry"** Even though you may see reading of 0.00 before issuing the **"Cal,dry"** command, it is still a necessary part of calibration.

00.00 → **"Cal,dry"** → 0.00 ✓ **Correct**

17.00 → **"Cal,dry"** → 0.00 ✓ **Also correct**

4. Single point or Two point calibration

No calibration



Single point calibration



Narrow range of accuracy

Two point calibration




Low point

High point

Wide range of accuracy


Recommended calibration points

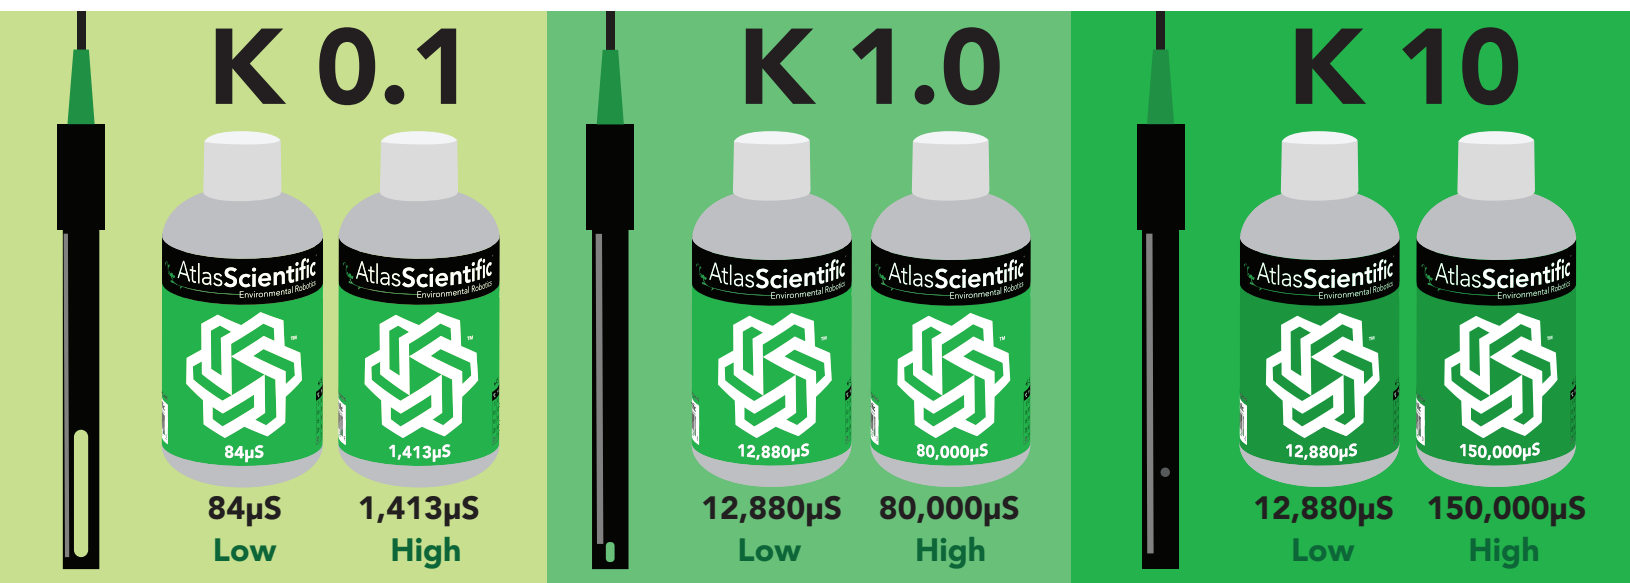


When calibrating, Atlas Scientific recommends using the above µS values. However, you can use any µS values you want.

Two point calibration - low point


Pour a small amount of the low point calibration solution into a cup. Shake the probe to make sure you do not have trapped air bubbles in the sensing area. You should see readings that are off by **1 – 40%** from the stated value of the calibration solution. Wait for readings to stabilize (*small movement from one reading to the next is normal*).

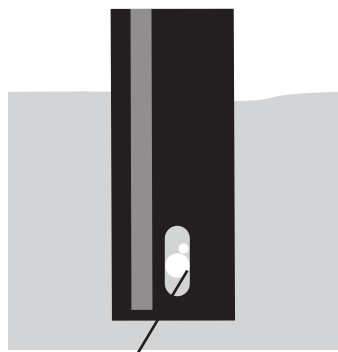


Trapped air in sensing area (shake to remove)

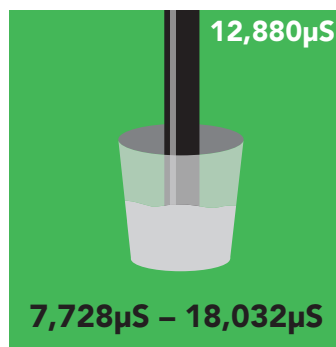

+/- 40%

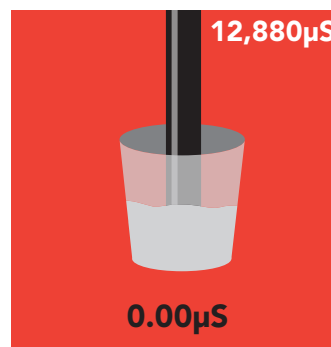


check probe connection,
you cannot calibrate to 0.

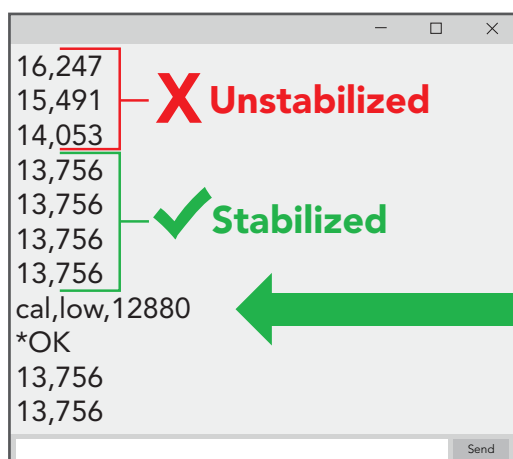

Once the readings stabilize, issue the low point calibration command. "**cal,low,12880**"
(Readings will **NOT** change)

Two point calibration - high point


- Rinse off the probe before calibrating to the high point.
- Pour a small amount of the high point calibration solution into a cup.
- Shake the probe to remove trapped air.
- Readings may be off by +/- 40%
- Wait for readings to stabilize.

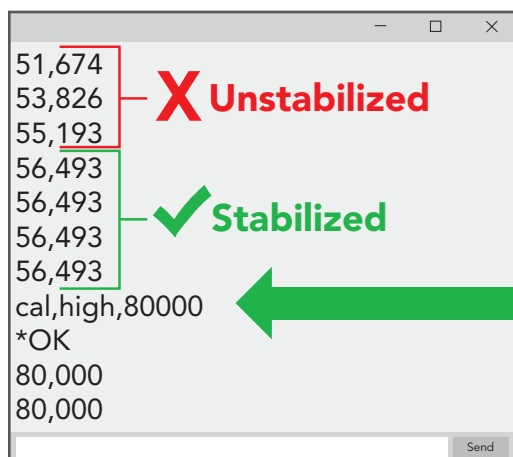

Once the readings stabilize, issue the high point calibration command. "**cal,high,80000**"
(Readings **will** change, calibration complete).

Single point calibration

- Pour a small amount of calibration solution into a cup (μS value of your choice).
- Shake the probe to remove trapped air.
- Readings may be off by +/- 40%
- Wait for readings to stabilize.

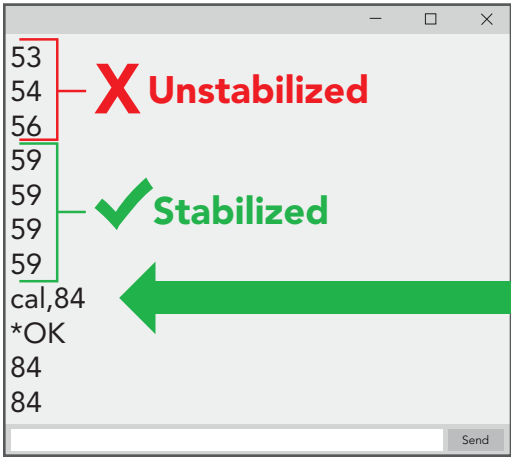

Once the readings stabilize, issue the single point calibration command. "**cal,n**" where n = any value. (Readings **will** change, calibration complete).

Temperature compensation during calibration


Temperature has a significant effect on conductivity readings. The EZO™ Conductivity circuit has its temperature compensation set to 25° C as the default. **At no point should you change the default temperature compensation during calibration.**

If the solution is +/- 5° C (or more), refer to the chart on the bottle, and calibrate to that value.

+/- 5			25°C / 77°F		
°C	°F	$\mu S/cm$	°C	°F	$\mu S/cm$
5	41	8,220	30	86	14,120
10	50	9,330	35	95	15,550
15	59	10,480	40	104	16,880
20	68	11,670	45	113	18,210
25	77	12,880	50	122	19,550


Temperature compensation example

For this example, we brought the temperature of the solution down to 10° C.
Referring to chart on the bottle, you can see the value you should calibrate to is **9,330µS**.

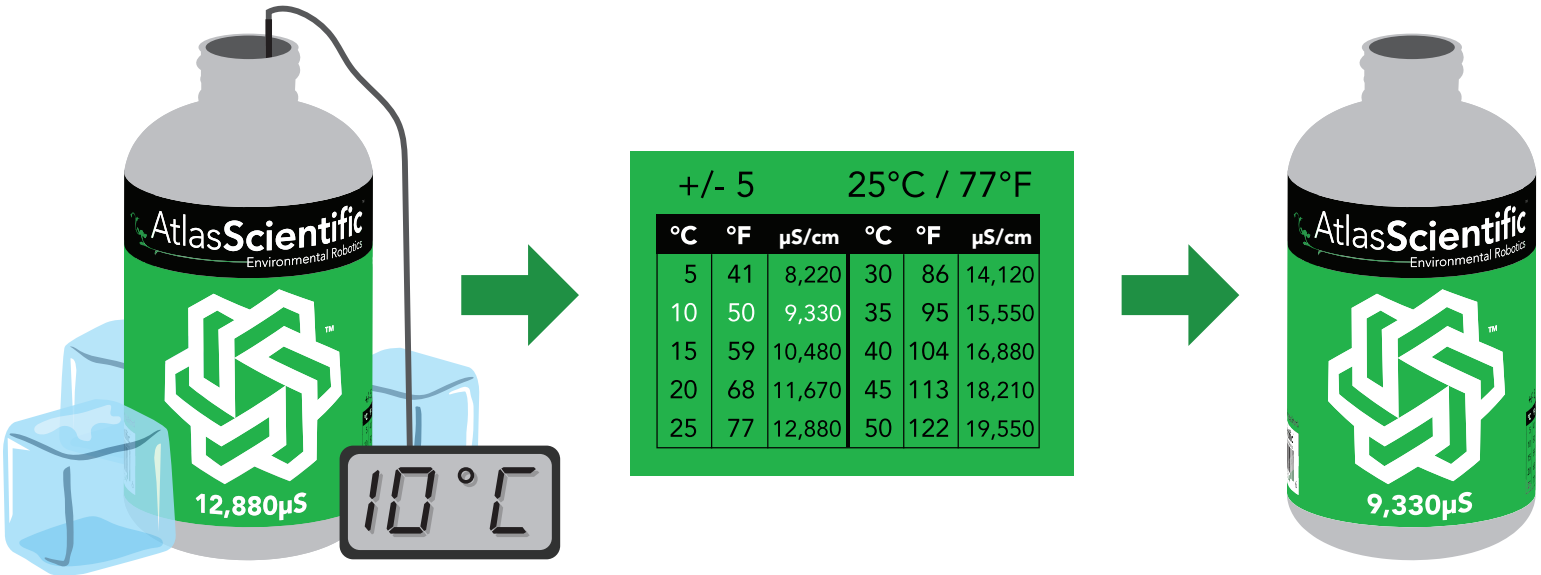

Over time, the readings will normalize as the solution warms to 25° C.

See pages **34** or **61** for more information.

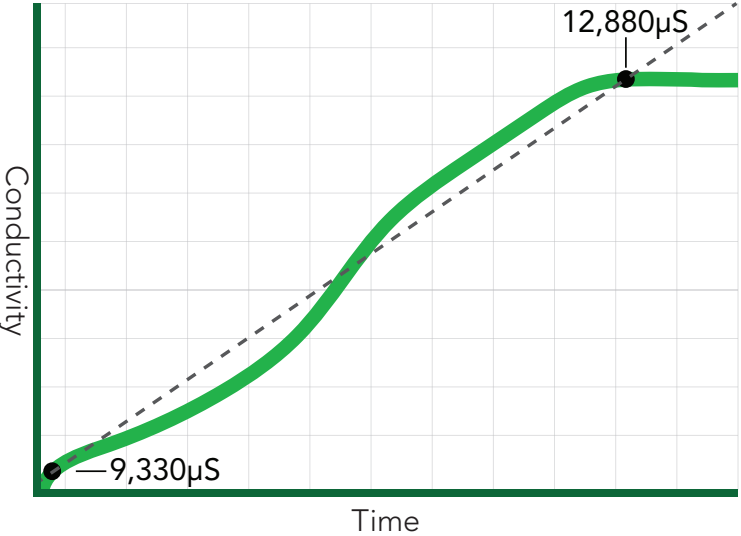

Default state

UART mode

Baud

9,600

Readings

continuous

Units


$\mu\text{S}/\text{cm}$

Speed

1 reading per second

LED

on

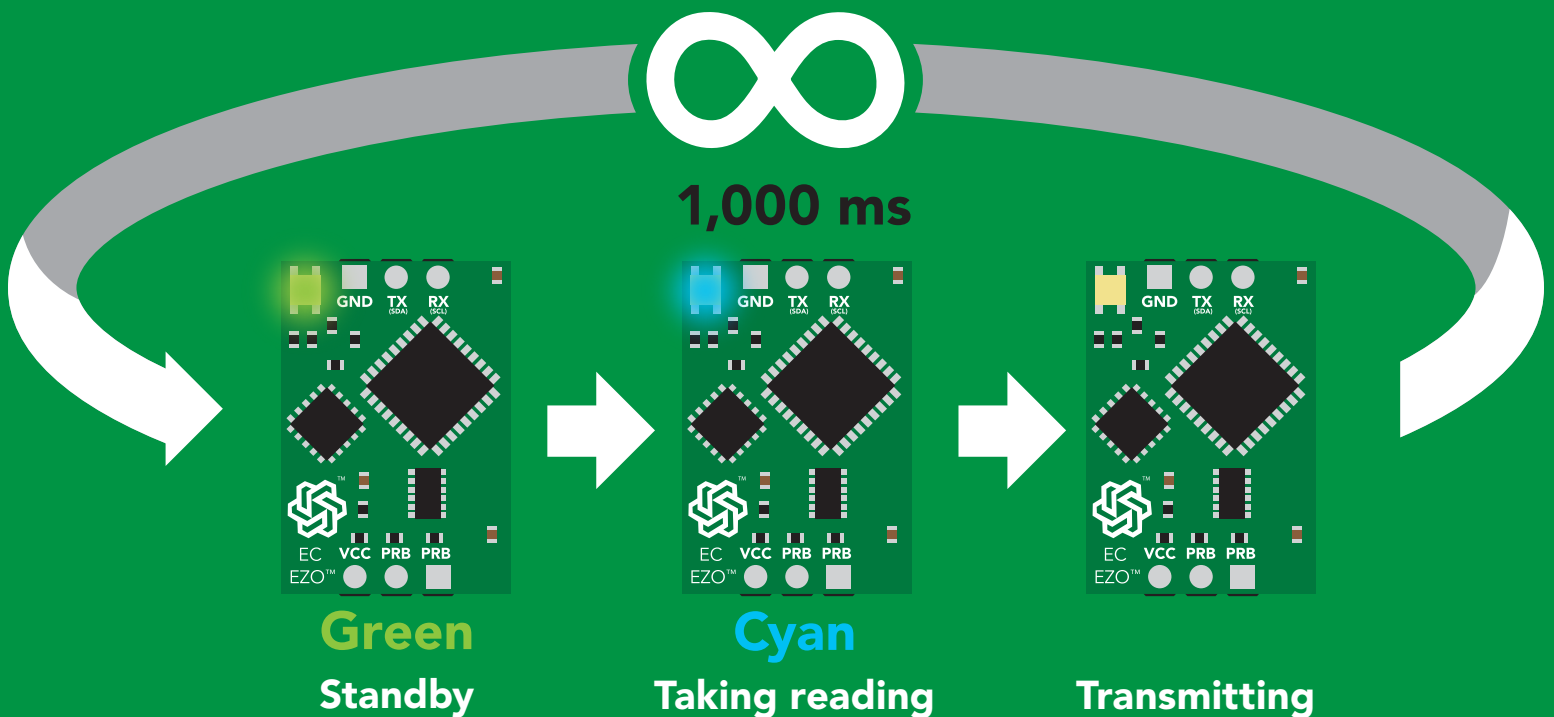

✓ Available data protocols

UART

Default

I²C

✗ Unavailable data protocols

SPI

Analog

RS-485

Mod Bus

4–20mA

UART mode

Settings that are retained if power is cut

- Baud rate
- Calibration
- Continuous mode
- Device name
- Enable/disable parameters
- Enable/disable response codes
- Hardware switch to I²C mode
- LED control
- Protocol lock
- Software switch to I²C mode

Settings that are **NOT** retained if power is cut

- Find
- Sleep mode
- Temperature compensation

UART mode

8 data bits no parity
1 stop bit no flow control

Baud 300
1,200
2,400
9,600 default
19,200
38,400
57,600
115,200

RX
Data in




TX
Data out



Vcc 3.3V – 5.5V

0V  0V

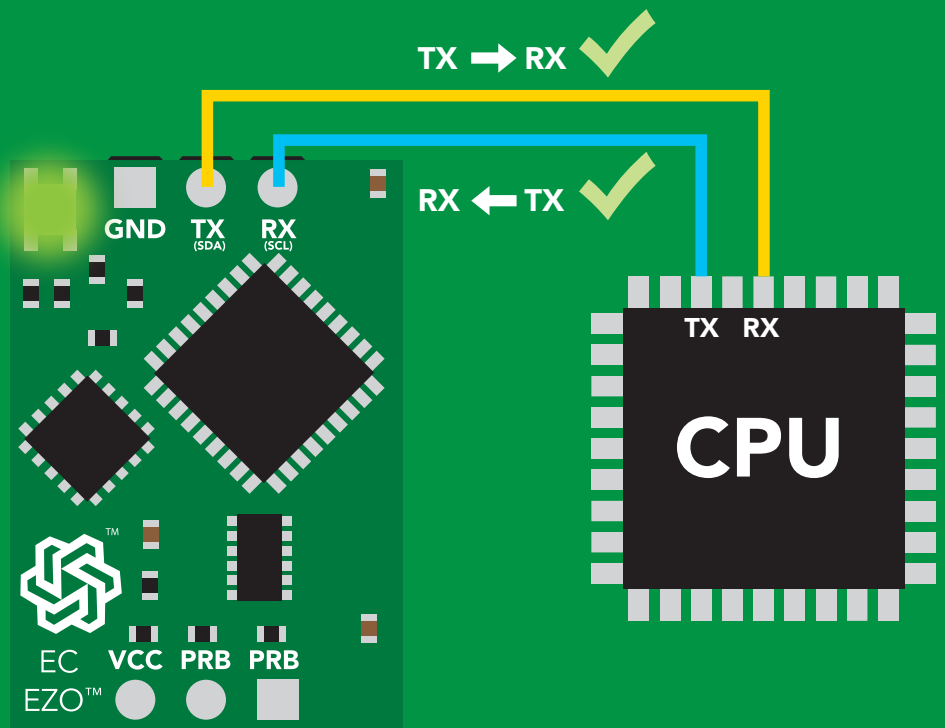

Data format

Reading

Conductivity = $\mu\text{S}/\text{cm}$
Total dissolved solids = ppm
Salinity = PSU (ppt) 0.00 – 42.00
Specific gravity (sea water only) = 1.00 – 1.300

Units EC, TDS, SAL, SG

Encoding ASCII

Format string

Terminator

Data type

Decimal places 3

Smallest string 3 characters

Largest string 40 characters

carriage return

floating point

Receiving data from device


2 parts

ASCII data string

Command

Carriage return <cr>

Terminator

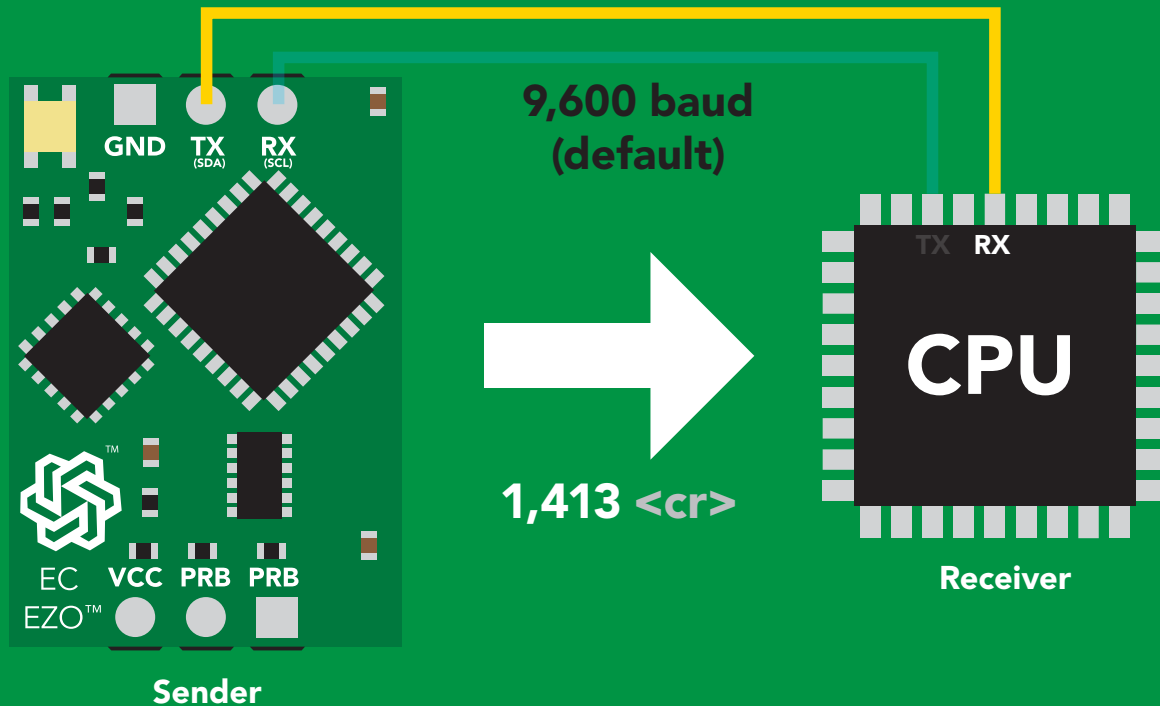

Advanced

ASCII: 1 , 4 1 3 <cr>

Hex: 31 2C 34 31 33 0D

Dec: 49 44 52 49 51 13

Sending commands to device


2 parts

Command (not case sensitive)

ASCII data string

Carriage return <cr>

Terminator

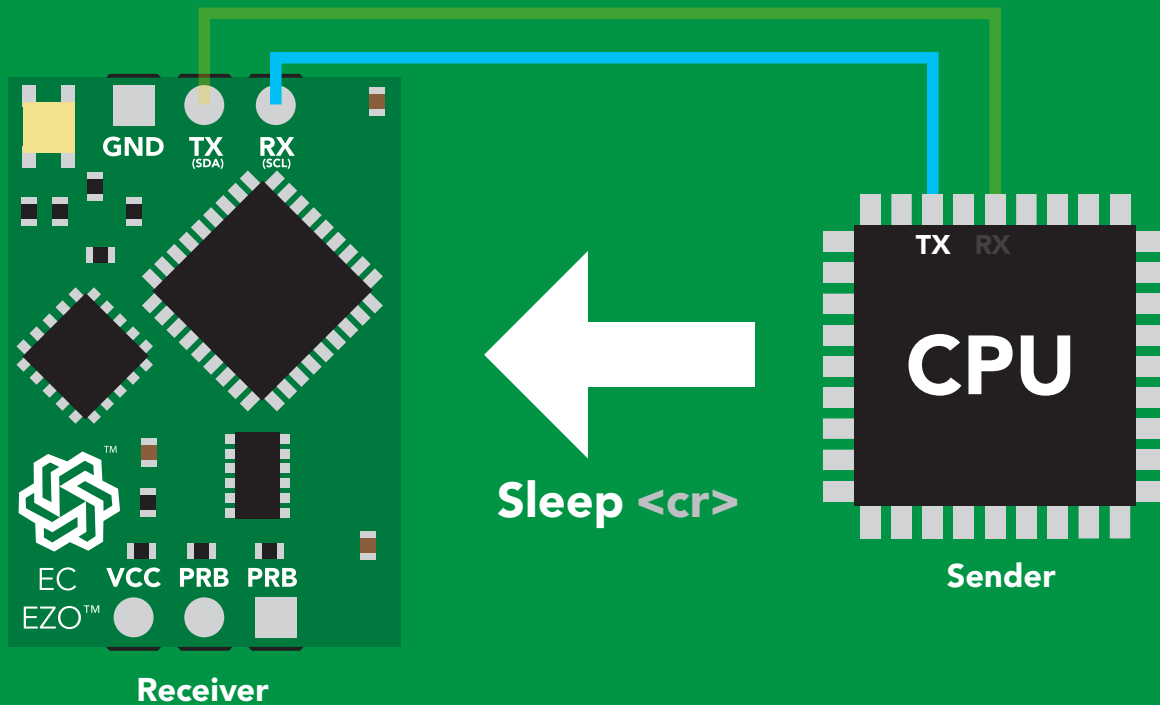


Advanced

ASCII: **S** **I** **e** **e** **p** **<cr>**


Hex: **53** **6C** **65** **65** **70** **0D**

Dec: **83** **108** **101** **101** **112** **13**


LED color definition

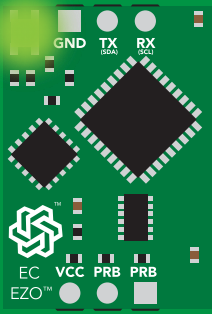


Green
UART standby

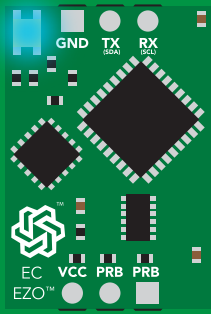


Cyan
Taking reading

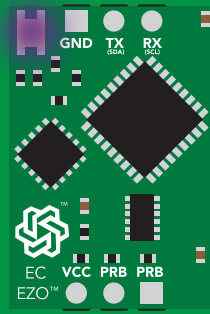

Purple
Changing baud rate

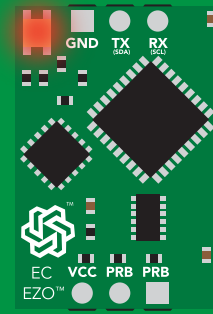

Red
Command not understood

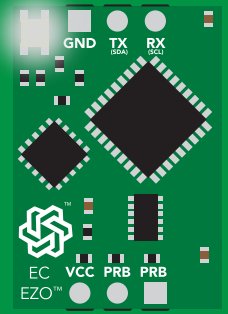

White
Find

5V

LED ON
+2.5 mA

3.3V

+1 mA

UART mode

command quick reference

All commands are ASCII strings or single ASCII characters.

Command	Function		Default state
Baud	change baud rate	pg. 41	9,600
C	enable/disable continuous reading	pg. 27	enabled
Cal	performs calibration	pg. 29	n/a
Export	export calibration	pg. 31	n/a
Factory	enable factory reset	pg. 43	n/a
Find	finds device with blinking white LED	pg. 26	n/a
i	device information	pg. 37	n/a
I2C	change to I ² C mode	pg. 44	not set
Import	import calibration	pg. 32	n/a
K	Set probe type	pg. 33	K 1.0
L	enable/disable LED	pg. 25	enabled
Name	set/show name of device	pg. 36	not set
O	enable/disable parameters	pg. 35	all enabled
Plock	enable/disable protocol lock	pg. 42	disabled
R	returns a single reading	pg. 28	n/a
Sleep	enter sleep mode/low power	pg. 40	n/a
Status	retrieve status information	pg. 39	enable
T	temperature compensation	pg. 34	25°C
TDS	change the TDS conversion factor	pg. 30	n/a
*OK	enable/disable response codes	pg. 38	enable

LED control

Command syntax

L,1 <cr> LED on **default**

L,0 <cr> LED off

L,? <cr> LED state on/off?

Example

Response

L,1 <cr>


*OK <cr>

L,0 <cr>


*OK <cr>

L,? <cr>

?L,1 <cr> or ?L,0 <cr>
*OK <cr>

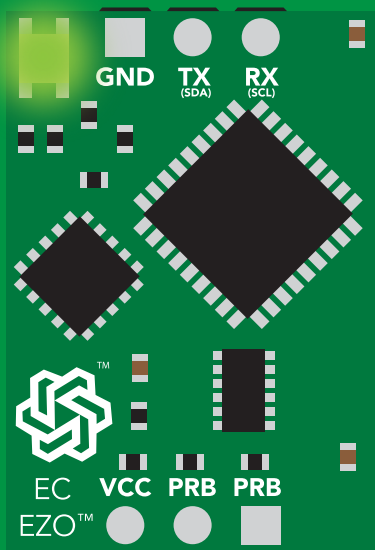

L,1

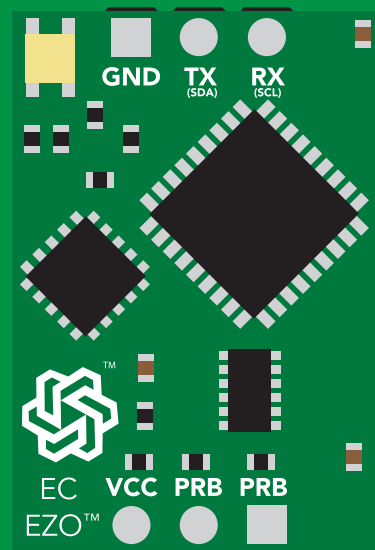

L,0

Find

Command syntax

This command will disable continuous mode
Send any character or command to terminate find.


Find <cr> LED rapidly blinks white, used to help find device

Example

Find <cr>

Response

***OK** <cr>

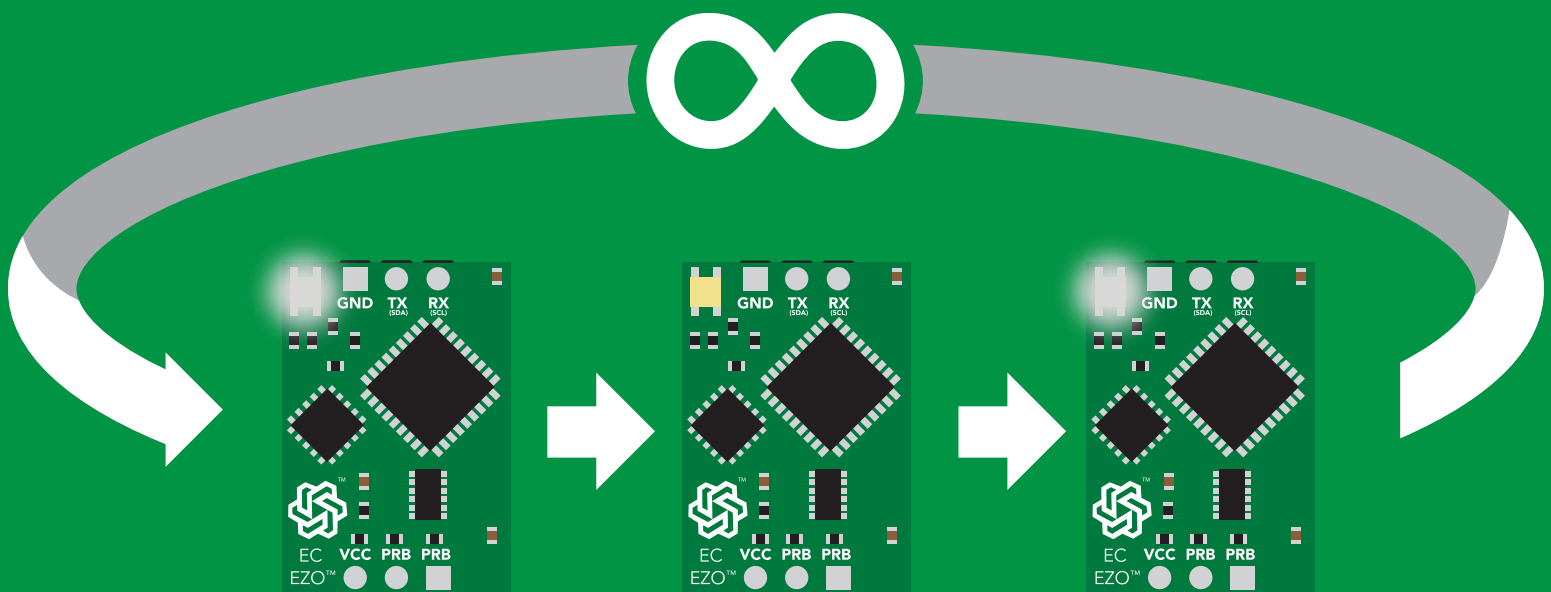

Continuous reading mode

Command syntax

- C,1 <cr>** enable continuous readings once per second **default**
- C,n <cr>** continuous readings every n seconds (n = 2 to 99 sec)
- C,0 <cr>** disable continuous readings
- C,? <cr>** continuous reading mode on/off?

Example

Response

C,1 <cr>

***OK <cr>**
EC,TDS,SAL,SG (1 sec) <cr>
EC,TDS,SAL,SG (2 sec) <cr>
EC,TDS,SAL,SG (3 sec) <cr>

C,30 <cr>

***OK <cr>**
EC,TDS,SAL,SG (30 sec) <cr>
EC,TDS,SAL,SG (60 sec) <cr>
EC,TDS,SAL,SG (90 sec) <cr>

C,0 <cr>

***OK <cr>**

C,? <cr>

?C,1 <cr> or ?C,0 <cr> or ?C,30 <cr>
***OK <cr>**

Single reading mode

Command syntax


R <cr> takes single reading

Example

R <cr>


Response

1,413 <cr>
***OK** <cr>

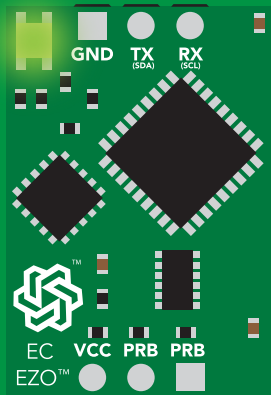


Green

Standby

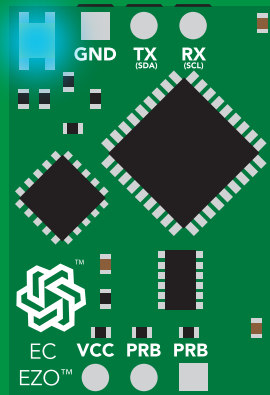

Cyan

Taking reading

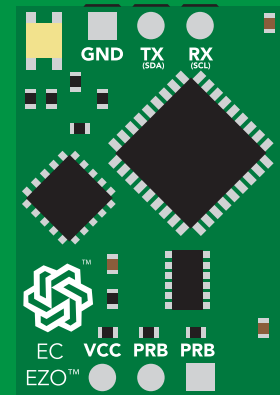

Transmitting



600 ms

Calibration

Command syntax

Dry calibration must always be done first!

Cal,dry	<cr>	dry calibration
Cal,n	<cr>	single point calibration, where n = any value
Cal,low,n	<cr>	low end calibration, where n = any value
Cal,high,n	<cr>	high end calibration, where n = any value
Cal,clear	<cr>	delete calibration data
Cal,?	<cr>	device calibrated?

Example

Response

Cal,dry <cr>	*OK <cr>
Cal,84 <cr>	*OK <cr>
Cal,low,12880 <cr>	*OK <cr>
Cal,high,80000 <cr>	*OK <cr>
Cal,clear <cr>	*OK <cr>
Cal,? <cr>	?CAL,0 <cr> or ?CAL,1 <cr> or ?CAL,2 <cr> one point two point *OK <cr>

One point calibration:

Step 1. "cal,dry"

Step 2. "cal,n"

Calibration complete!

Two point calibration:

Step 1 "cal,dry"

Step 2 "cal,low,n"

Step 3 "cal,high.n"

Calibration complete!

Changing the TDS (ppm) conversion factor

Command syntax

There are several different conversion factors used to read TDS(ppm). For some applications, it may be necessary to use a conversion factor other than the default value of 0.54

TDS,n <cr> set custom conversion factor, n = any value between 0.01 – 1.00
TDS,? <cr> conversion factor being used

Example

Response

TDS,? <cr>

?TDS,0.54 <cr>
*OK <cr>

R <cr>

EC TDS
↓ ↓
100,54 <cr>
*OK <cr>

TDS,0.46 <cr>

*OK <cr>

R <cr>

EC TDS
↓ ↓
100,46 <cr>
*OK <cr>

Common conversion factors

NaCl	0.47 – 0.50
KCL	0.50 - 0.57
"442"	0.65 – 0.85

Formula

EC x conversion factor = TDS

Export calibration

Command syntax

Export: Use this command to download calibration settings

Export,? <cr> calibration string info

Export <cr> export calibration string from calibrated device

Example

Export,? <cr>

Response

10,120 <cr>

Response breakdown

10, 120

of strings to export

of bytes to export

Export strings can be up to 12 characters long,
and is always followed by <cr>

Export <cr>

Export <cr>

(7 more)

Export <cr>

Export <cr>

59 6F 75 20 61 72 <cr> **(1 of 10)**

65 20 61 20 63 6F <cr> **(2 of 10)**


⋮

6F 6C 20 67 75 79 <cr> **(10 of 10)**

***DONE**

Disabling *OK simplifies this process

Export <cr>

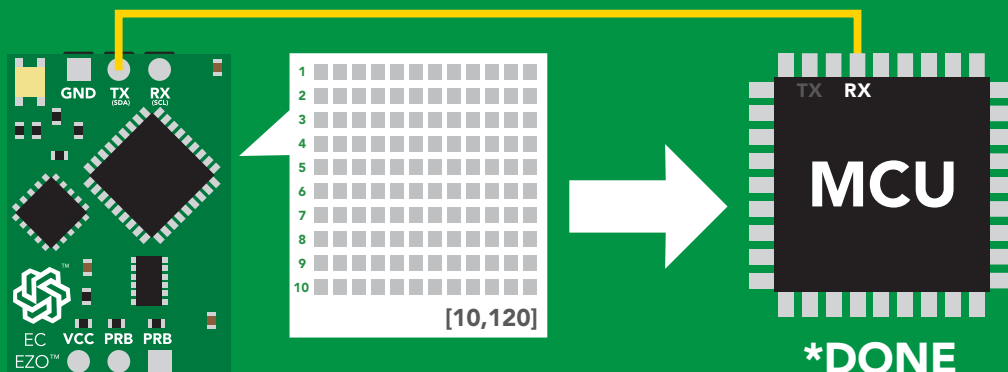

Import calibration

Command syntax

Import: Use this command to upload calibration settings to one or more devices.

Import,n <cr> import calibration string to new device

Example

Import, 59 6F 75 20 61 72 <cr> (1 of 10)

Import, 65 20 61 20 63 6F <cr> (2 of 10)

⋮

Import, 6F 6C 20 67 75 79 <cr> (10 of 10)

Response


***OK** <cr>

***OK** <cr>

⋮


***OK** <cr>

Import,n <cr>

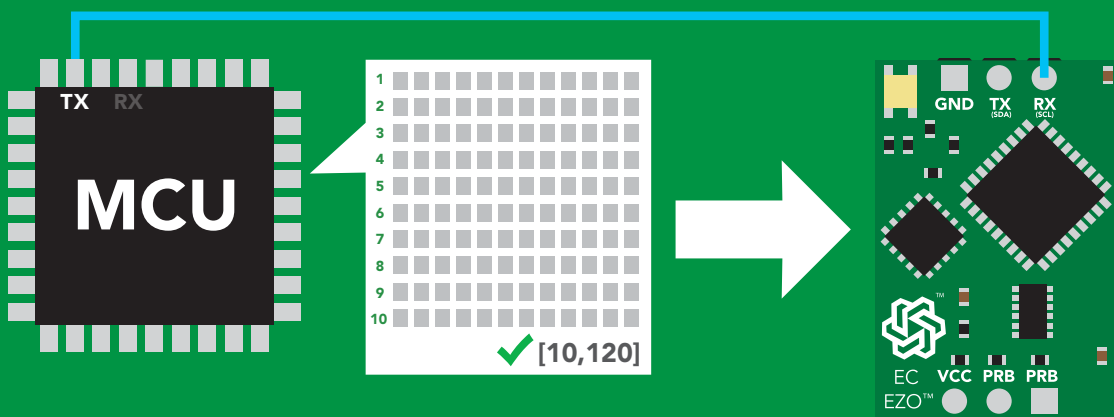

***OK** <cr>

system will reboot

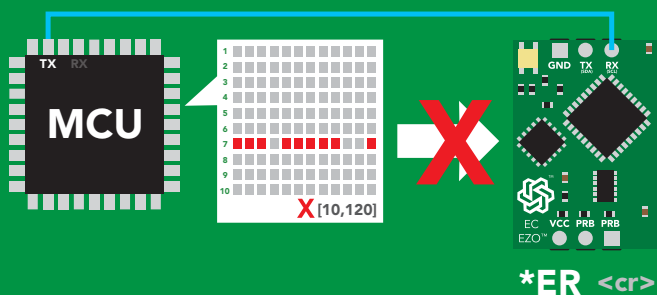

*** If one of the imported strings is not correctly entered, the device will not accept the import, respond with *ER and reboot.**

Setting the probe type

Command syntax

K 1.0 is the default value

K,n <cr> n = any value; floating point in ASCII

K,? <cr> probe K value?

Example


Response

K,10 <cr>

*OK <cr>

K,? <cr>

?K,10 <cr>
*OK <cr>



K 0.1



K 1.0



K 10

Temperature compensation

Command syntax

Default temperature = 25°C

Temperature is always in Celsius

Temperature is not retained if power is cut

T,n <cr> n = any value; floating point or int

T,? <cr> compensated temperature value?

RT,n <cr> set temperature compensation and take a reading*

* This is a new command for firmware V2.13

Example

Response

T,19.5 <cr>


*OK <cr>

RT,19.5 <cr>


*OK <cr>
8.91 <cr>

T,? <cr>

?T,19.5 <cr>
*OK <cr>

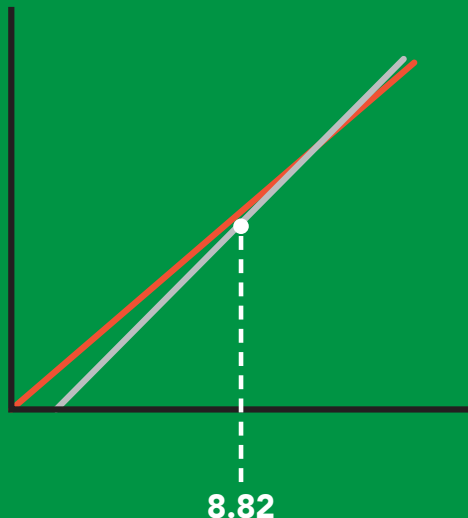

→
T,19.5 <cr>

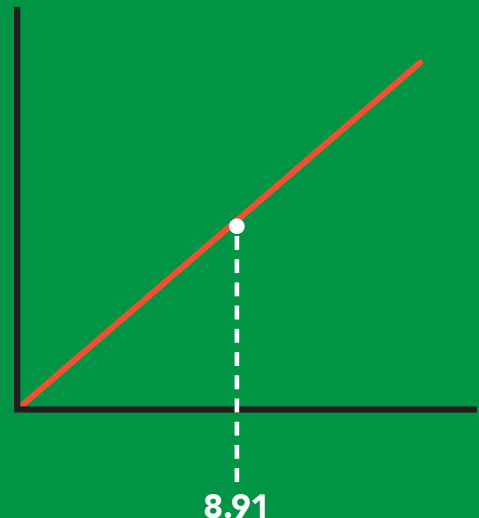

Enable/disable parameters from output string

Command syntax

O, [parameter],[1,0] <cr> enable or disable output parameter
O,? <cr> enabled parameter?

Example

O,EC,1 / O,EC,0 <cr>

O,TDS,1 / O,TDS,0 <cr>

O,S,1 / O,S,0 <cr>

O,SG,1 / O,SG,0 <cr>

O,? <cr>

Response

*OK <cr> enable / disable conductivity

*OK <cr> enable / disable total dissolved solids

*OK <cr> enable / disable salinity

*OK <cr> enable / disable specific gravity

?,O,EC,TDS,S,SG <cr> if all are enabled

Parameters

EC conductivity
TDS total dissolved solids
S salinity
SG specific gravity

Followed by 1 or 0

1 enabled
0 disabled

* If you disable all possible data types your readings will display "no output".

Naming device

Command syntax

Do not use spaces in the name

Name,n <cr> set name

Name, <cr> clears name

Name,? <cr> show name

n =

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

Up to 16 ASCII characters

Example

Response

Name, <cr>

*OK <cr> name has been cleared


Name,zzt <cr>

*OK <cr>

Name,? <cr>


?Name,zzt <cr>
*OK <cr>

Name,zzt

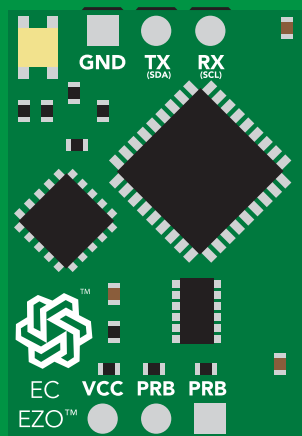

*OK <cr>

Name,?

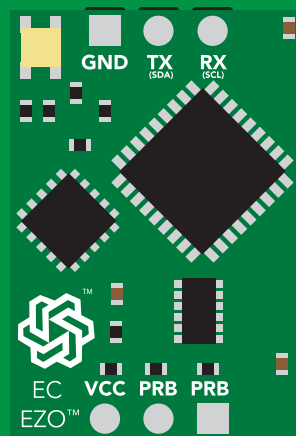

?Name,zzt <cr>
*OK <cr>

Device information

Command syntax

```
i <cr> device information
```

Example

```
i <cr>
```

Response

```
?i,EC,2.10 <cr>  
*OK <cr>
```

Response breakdown

?i,	EC,	2.10
	↑	↑
	Device	Firmware

Response codes

Command syntax

- *OK,1** <cr> enable response **default**
- *OK,0** <cr> disable response
- *OK,?** <cr> response on/off?

Example

Response

R <cr>

1,413 <cr>
***OK** <cr>

***OK,0** <cr>

no response, ***OK** disabled

R <cr>

1,413 <cr> ***OK** disabled

***OK,?** <cr>

?*OK,1 <cr> or **?*OK,0** <cr>

Other response codes

- *ER** unknown command
- *OV** over volt ($VCC \geq 5.5V$)
- *UV** under volt ($VCC \leq 3.1V$)
- *RS** reset
- *RE** boot up complete, ready
- *SL** entering sleep mode
- *WA** wake up

These response codes
cannot be disabled

Reading device status

Command syntax

Status <cr> voltage at Vcc pin and reason for last restart

Example

Status <cr>

Response

?Status,P,5.038 <cr>
*OK <cr>

Response breakdown

?Status,	P,	5.038
	↑	↑
	Reason for restart	Voltage at Vcc

Restart codes

P	powered off
S	software reset
B	brown out
W	watchdog
U	unknown

Sleep mode/low power

Command syntax

Send any character or command to awaken device.

Sleep <cr> enter sleep mode/low power

Example

Response

Sleep <cr>

***OK** <cr>

***SL** <cr>

Any command


***WA** <cr> wakes up device

5V


STANDBY	SLEEP
18.14 mA	0.7 mA

3.3V


16.85 mA	0.4 mA
----------	--------

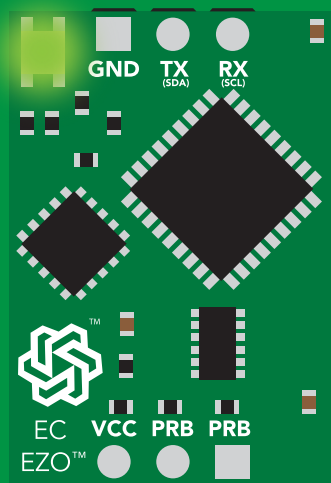

Standby
18.14 mA

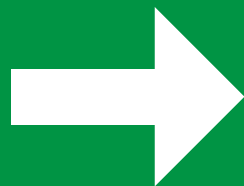

Sleep <cr>

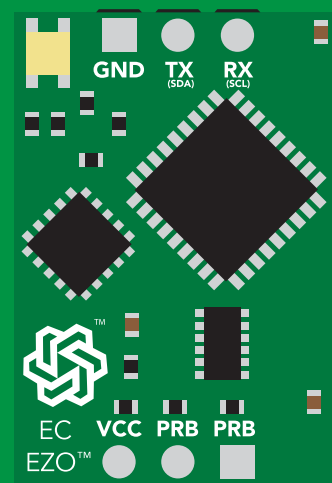

Sleep
0.7 mA

Change baud rate

Command syntax

Baud,n <cr> change baud rate

Example

Baud,38400 <cr>

Response

*OK <cr>


Baud,? <cr>

?Baud,38400 <cr>

*OK <cr>


n =

- 300
- 1200
- 2400
- 9600 default**
- 19200
- 38400
- 57600
- 115200

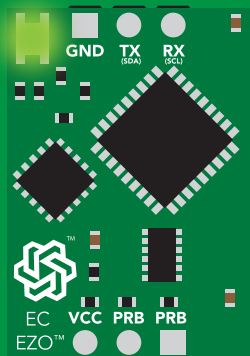


Standby

Baud,38400 <cr>

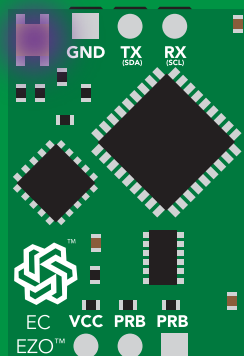


Changing
baud rate

*OK <cr>

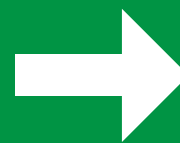

(reboot)

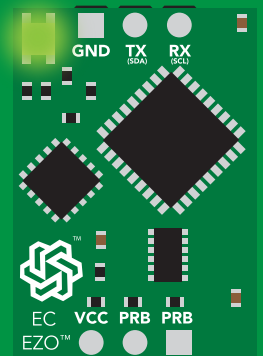

Standby

Protocol lock

Command syntax

Locks device to UART mode.

Plock,1 <cr> enable Plock

Plock,0 <cr> disable Plock **default**

Plock,? <cr> Plock on/off?

Example

Response

Plock,1 <cr>

*OK <cr>


Plock,0 <cr>

*OK <cr>

Plock,? <cr>


?Plock,1 <cr> or ?Plock,0 <cr>

Plock,1

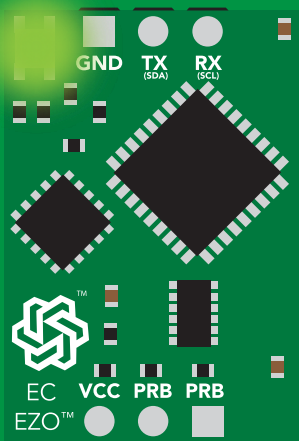


*OK <cr>

I2C,100

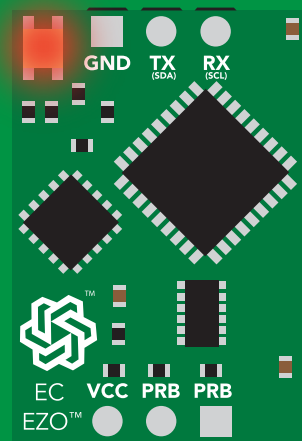

cannot change to I²C
*ER <cr>

Short

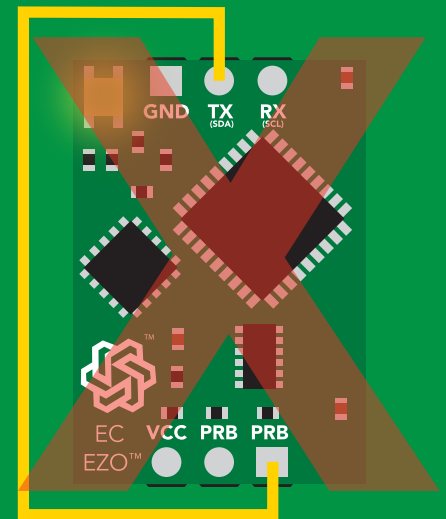

cannot change to I²C

Factory reset

Command syntax

Clears calibration
LED on
"*OK" enabled

Factory <cr> enable factory reset



Example

Response


Factory <cr>

*OK <cr>

Factory <cr>

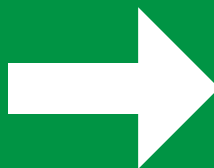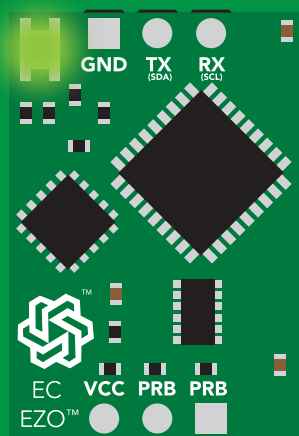

(reboot)

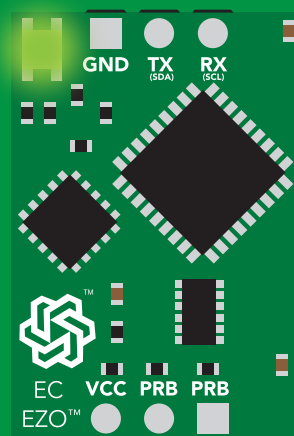

*OK <cr>

*RS <cr>

*RE <cr>

Baud rate will not change

Change to I²C mode

Command syntax

Default I²C address 100 (0x64)

I2C,n <cr> sets I²C address and reboots into I²C mode

n = any number 1 – 127

Example

I2C,100 <cr>

Response

*OK (reboot in I²C mode)


Wrong example

I2C,139 <cr> n ≠ 127

Response


*ER <cr>

I2C,100

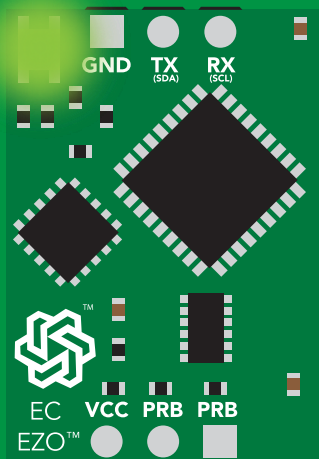


Green

*OK <cr>

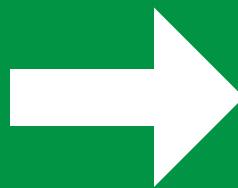

(reboot)

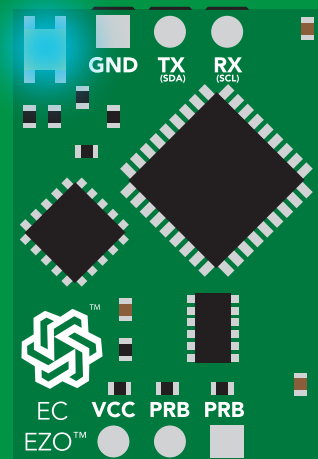

Blue


now in I²C mode

Manual switching to I²C


- Disconnect ground (power off)
- Disconnect TX and RX
- Connect TX to the right PRB
- Confirm RX is disconnected
- Connect ground (power on)
- Wait for LED to change from **Green** to **Blue**
- Disconnect ground (power off)
- Reconnect all data and power

Manually switching to I²C will set the I²C address to 100 (0x64)

Example

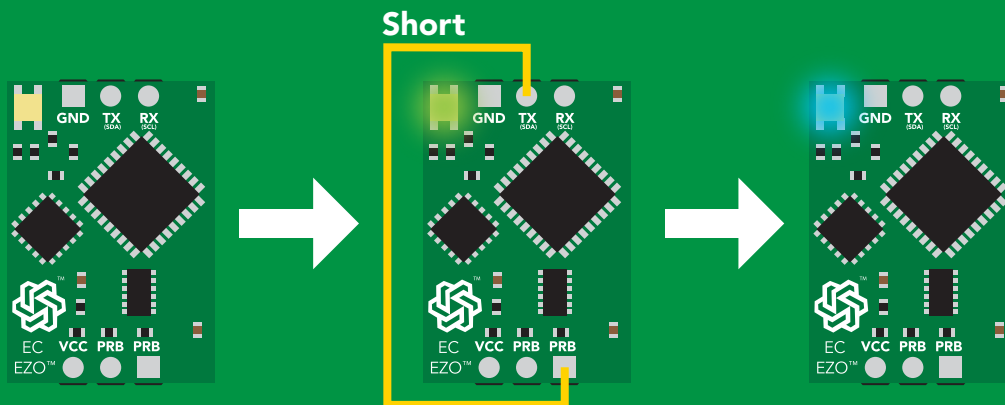

Wrong Example

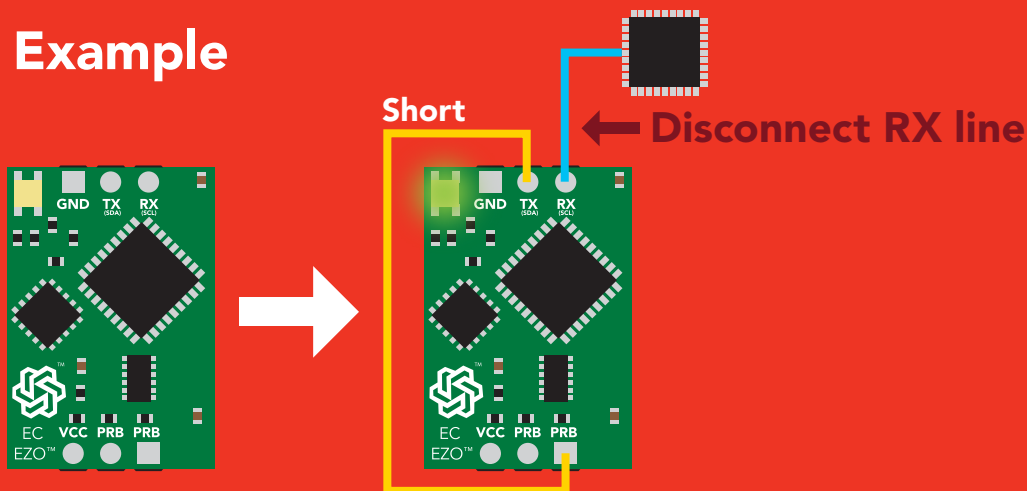

I²C mode

The I²C protocol is **considerably more complex** than the UART (RS-232) protocol. Atlas Scientific assumes the embedded systems engineer understands this protocol.

To set your EZO™ device into I²C mode [click here](#)

Settings that are retained if power is cut

- Calibration
- Change I²C address
- Enable/disable parameters
- Hardware switch to UART mode
- LED control
- Protocol lock
- Software switch to UART mode

Settings that are **NOT** retained if power is cut

- Find
- Sleep mode
- Temperature compensation

I²C mode

I²C address (0x01 – 0x7F)
100 (0x64) default


V_{CC} 3.3V – 5.5V

Clock speed 100 – 400 kHz

SDA 

SCL 

 VCC
0V 0V

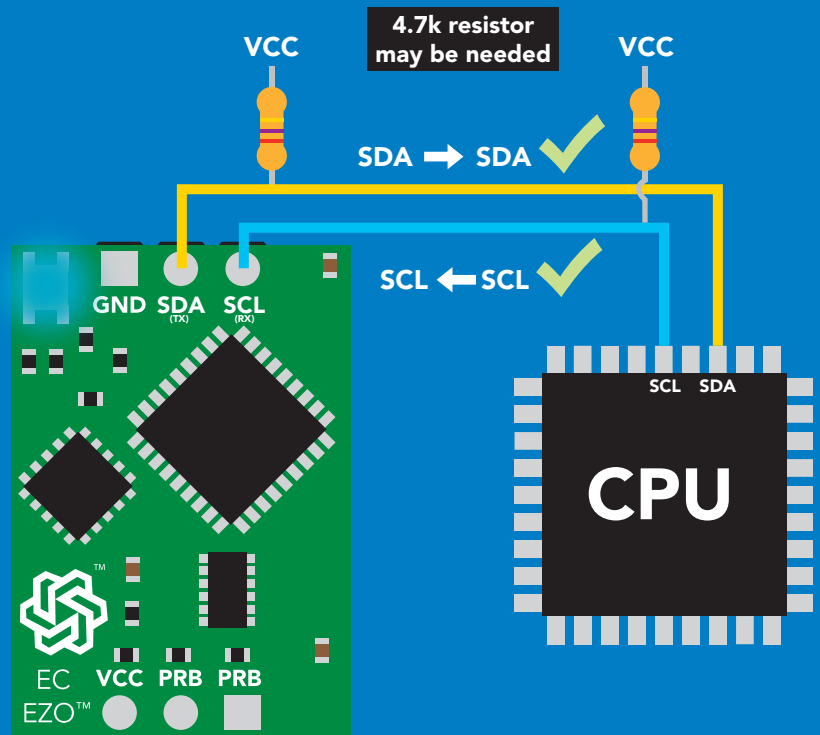

Data format

Reading Conductivity = $\mu\text{S/cm}$
Total dissolved solids = ppm
Salinity = PSU (ppt) 0.00 – 42.00
Specific gravity
(sea water only) = 1.00 – 1.300

Units EC, TDS, SAL, SG

Encoding ASCII

Format

Data type

Decimal places 3

Smallest string 3 characters

Largest string 40 characters

string


floating point

3


3 characters

40 characters


Sending commands to device

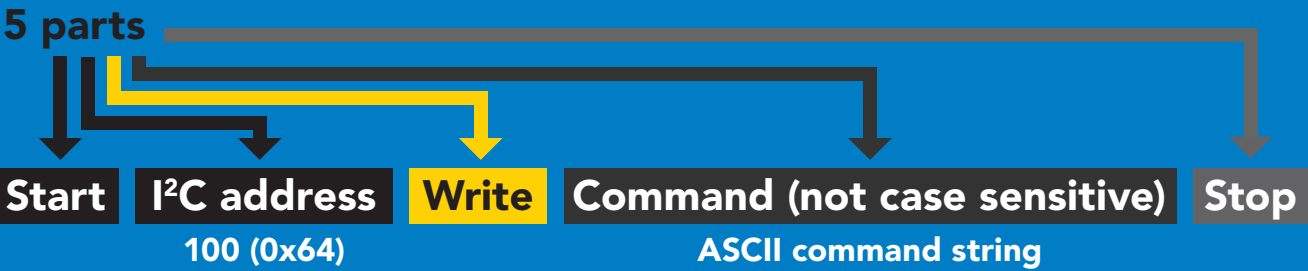



Example

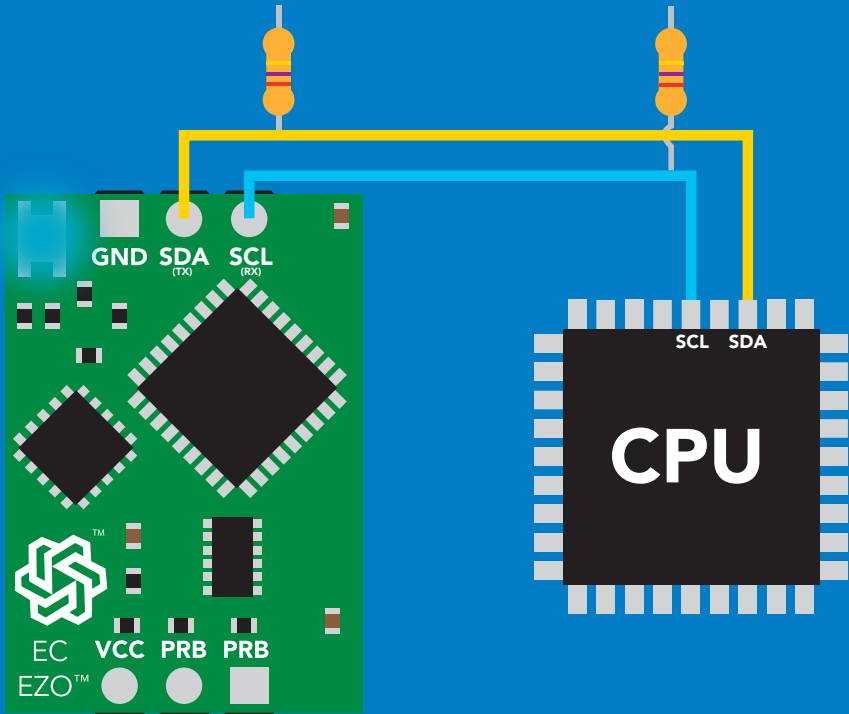


Advanced

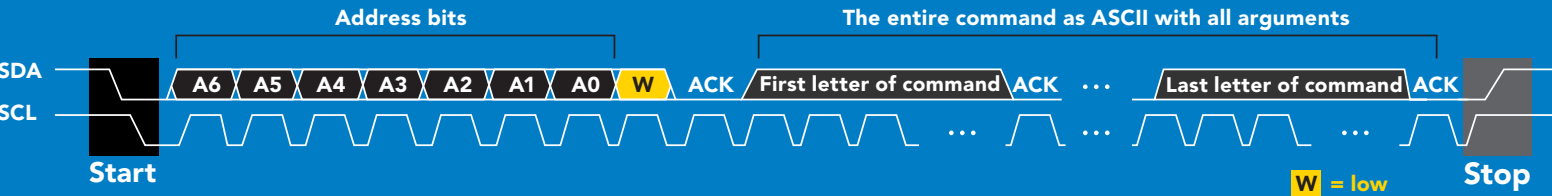

Requesting data from device

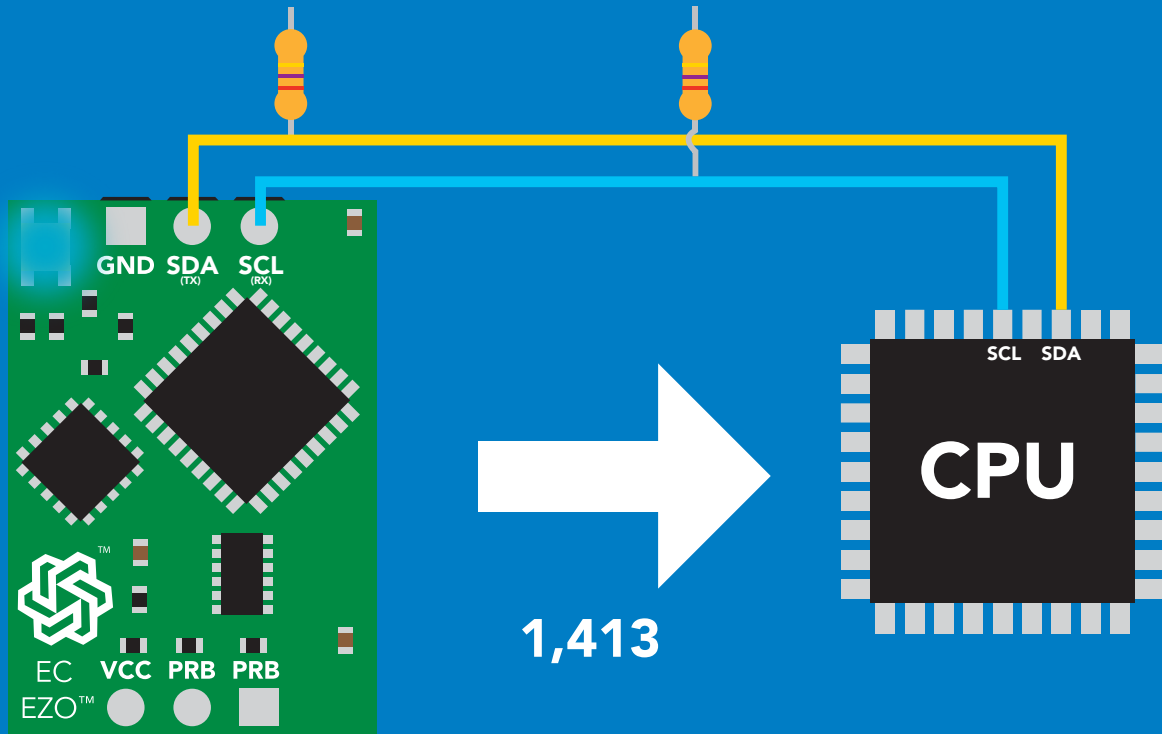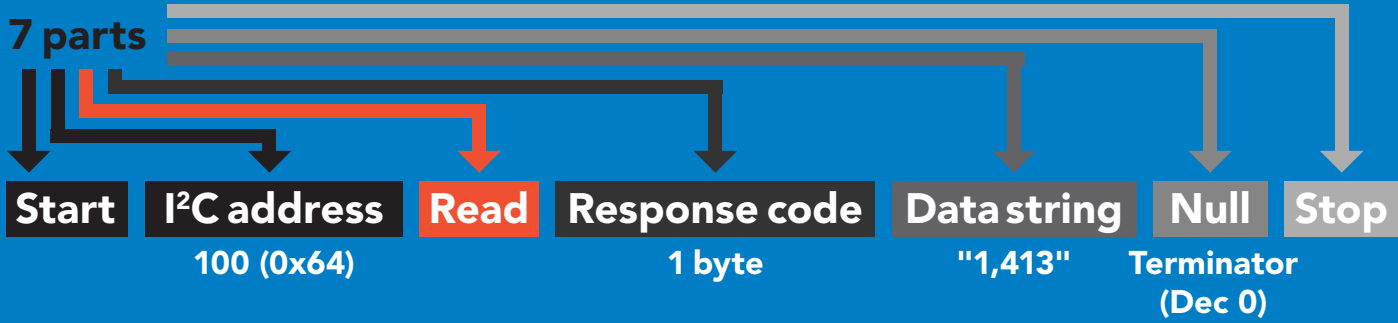

Advanced

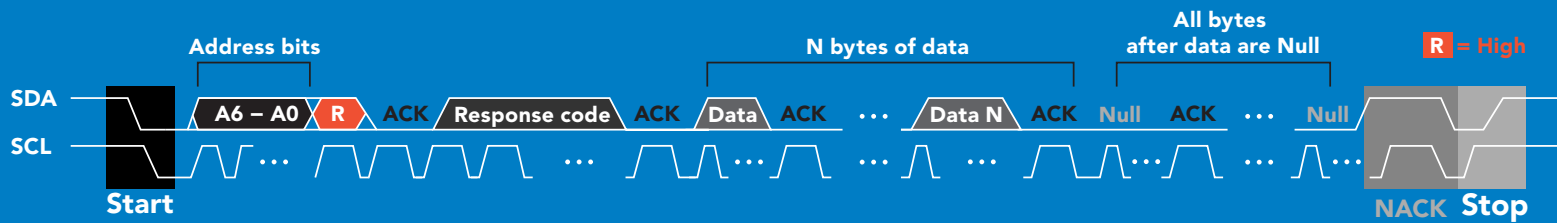


1 **49** **44** **52** **49** **51** **0** = 1,413

Dec ASCII Dec

Response codes

After a command has been issued, a 1 byte response code can be read in order to confirm that the command was processed successfully.

Reading back the response code is completely optional, and is not required for normal operation.

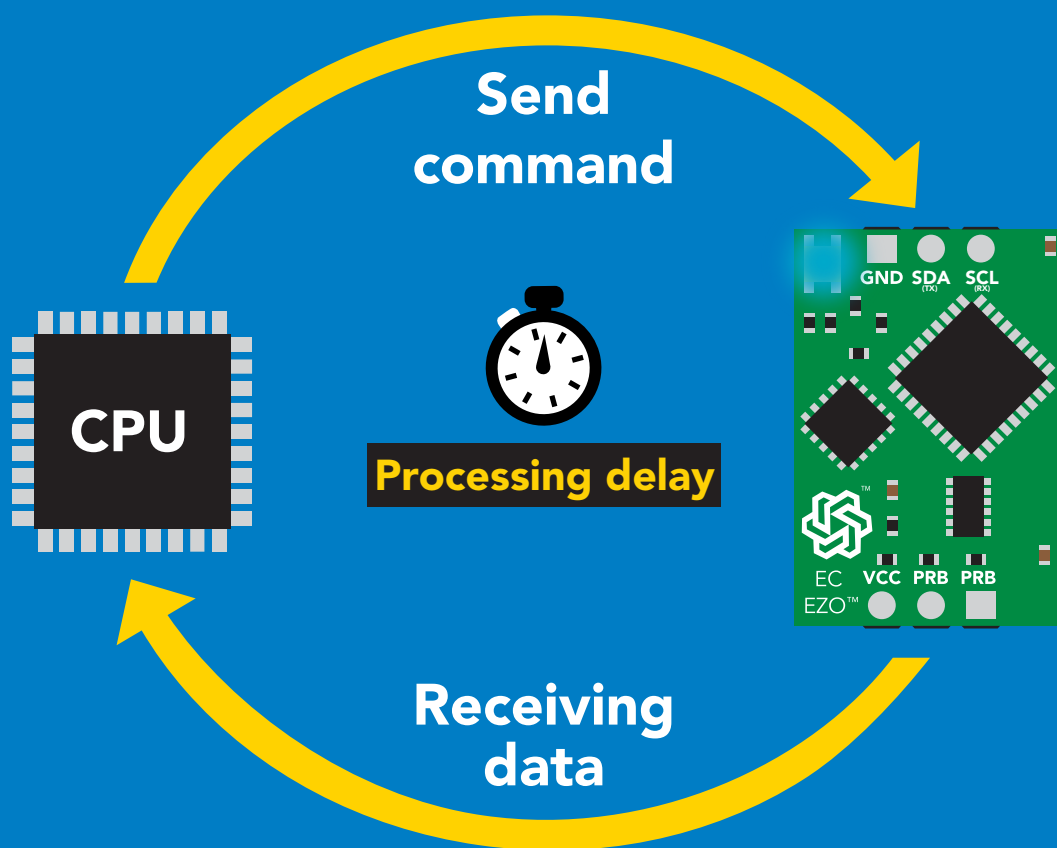

Example

```
I2C_start;  
I2C_address;  
I2C_write(EZO_command);  
I2C_stop;
```

delay(300);



Processing delay

```
I2C_start;  
I2C_address;  
Char[ ] = I2C_read;  
I2C_stop;
```


The response code will always be 254, if you do not wait for the processing delay.

Response codes

Single byte, not string


255	no data to send
254	still processing, not ready
2	syntax error
1	successful request

LED color definition

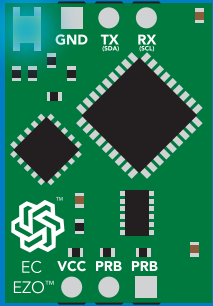


Blue

I²C standby

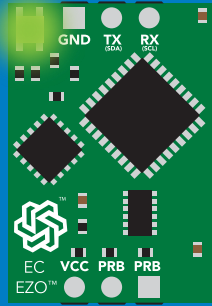


Green

Taking reading

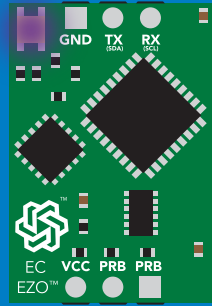


Purple

**Changing
I²C address**

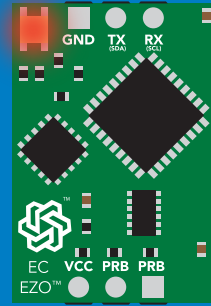

Red

**Command
not understood**

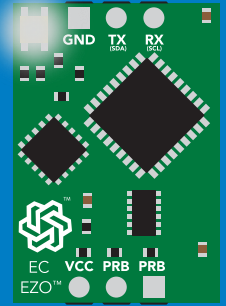

White

Find

5V

LED ON
+2.5 mA

3.3V

+1 mA

I²C mode

command quick reference

All commands are ASCII strings or single ASCII characters.

Command	Function	
Baud	switch back to UART mode	pg. 70
Cal	performs calibration	pg. 56
Export	export calibration	pg. 58
Factory	enable factory reset	pg. 69
Find	finds device with blinking white LED	pg. 54
i	device information	pg. 64
I2C	change I ² C address	pg. 68
Import	import calibration	pg. 59
K	set probe type	pg. 60
L	enable/disable LED	pg. 53
Name	set/show name of device	pg. 63
O	enable/disable parameters	pg. 62
Plock	enable/disable protocol lock	pg. 67
R	returns a single reading	pg. 55
Sleep	enter sleep mode/low power	pg. 66
Status	retrieve status information	pg. 65
T	temperature compensation	pg. 61
TDS	change the TDS conversion factor	pg. 57

LED control

Command syntax

300ms  processing delay

L,1 LED on **default**

L,0 LED off

L,? LED state on/off?

Example

Response

L,1


 **Wait 300ms**
1 Dec 0 Null

L,0


 **Wait 300ms**
1 Dec 0 Null

L,?

 **Wait 300ms**
1 Dec ?L,1 0 Null or 1 Dec ?L,0 0 Null

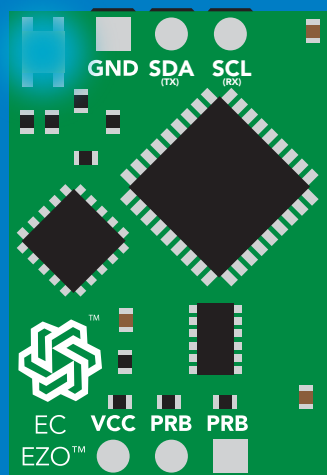

L,1

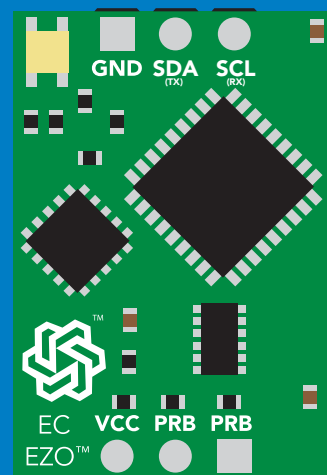

L,0

Find

300ms  processing delay

Command syntax

This command will disable continuous mode
Send any character or command to terminate find.


Find LED rapidly blinks white, used to help find device

Example

Response

Find

 **Wait 300ms** **1** **0**
Dec Null

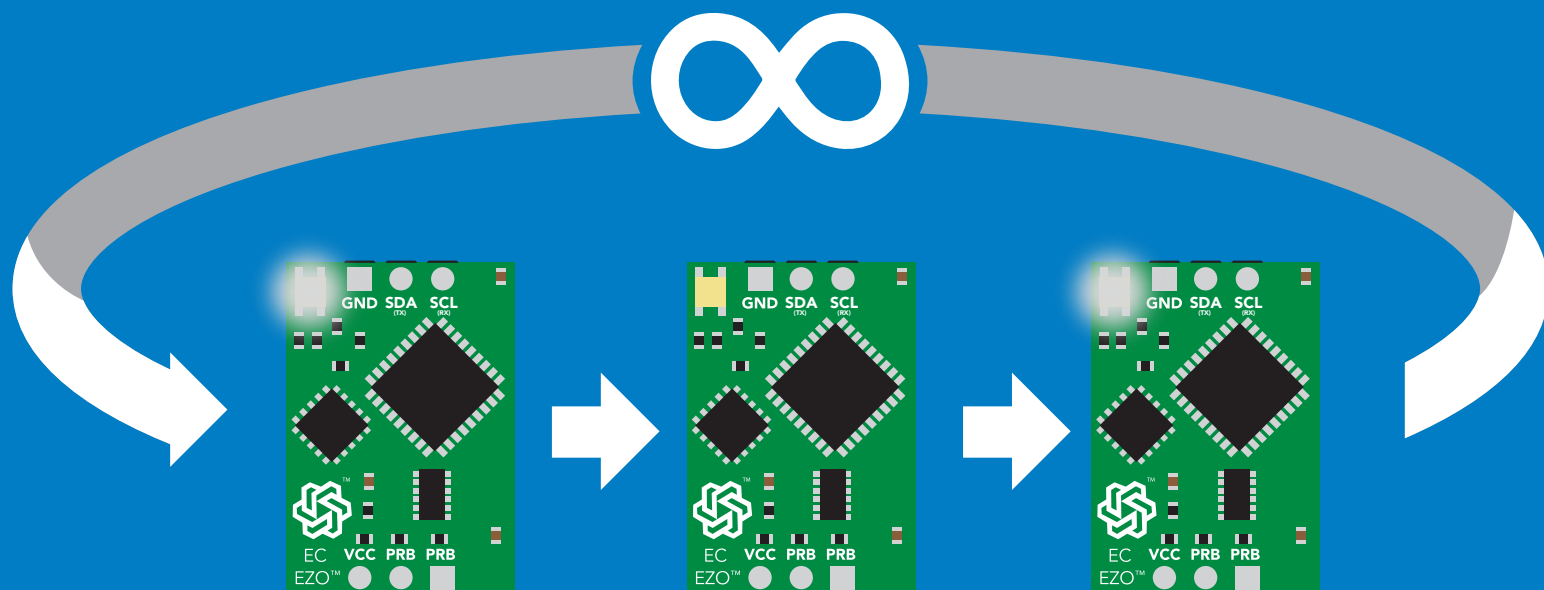

Taking reading

Command syntax

600ms  processing delay

R return 1 reading


Example

R

Response




Wait 600ms

1	1,413	0
Dec	ASCII	Null


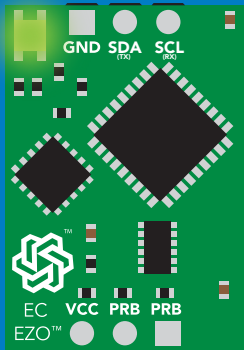


Green

Taking reading

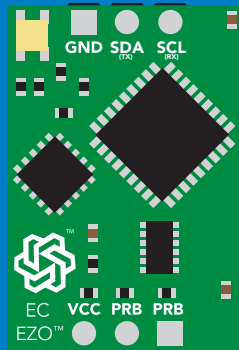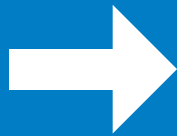

Transmitting

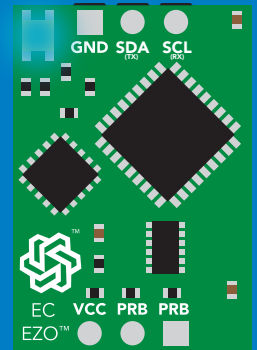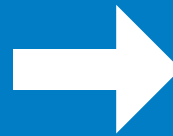

Blue

Standby

Calibration

600ms  processing delay

Command syntax

Dry calibration must always be done first!

Cal,dry	dry calibration
Cal,n	single point calibration, where n = any value
Cal,low,n	low end calibration, where n = any value
Cal,high,n	high end calibration, where n = any value
Cal,clear	delete calibration data
Cal,?	device calibrated?

Example

Response

Cal,dry

 **Wait 600ms**

1	0
Dec	Null

Cal,84

 **Wait 600ms**

1	0
Dec	Null

Cal,low,12880

 **Wait 600ms**

1	0
Dec	Null

Cal,high,80000

 **Wait 600ms**

1	0
Dec	Null

Cal,clear

 **Wait 300ms**

1	0
Dec	Null

Cal,?

 **Wait 300ms**

1	?CAL,0	0	or	1	?CAL,1	0	or	1	?CAL,2	0
Dec	ASCII	Null		Dec	ASCII	Null		Dec	ASCII	Null
					one point				two point	

One point calibration:

Step 1. "cal,dry"

Step 2. "cal,n"

Calibration complete!

Two point calibration:

Step 1 "cal,dry"

Step 2 "cal,low,n"

Step 3 "cal,high,n"

Calibration complete!

Changing the TDS (ppm) conversion factor

300ms  processing delay

There are several different conversion factors used to read TDS(ppm). For some applications, it may be necessary to use a conversion factor other than the default value of 0.54

Command syntax

TDS,n set custom conversion factor, n = any value between 0.01 – 1.00
TDS,? conversion factor being used

Example

Response

TDS,?

 **1** **?TDS,0.54** **0**
Wait 300ms Dec ASCII Null

R

 **1** **100,54** **0**
Wait 300ms Dec ASCII Null
EC TDS
↓ ↓

TDS,0.46

 **1** **0**
Wait 300ms Dec Null

R

 **1** **100,46** **0**
Wait 300ms Dec ASCII Null
EC TDS
↓ ↓

Common conversion factors

NaCl 0.47 – 0.50
KCL 0.50 - 0.57
"442" 0.65 – 0.85

Formula

EC x conversion factor = TDS

Export calibration

300ms  processing delay

Command syntax

Export: Use this command to download calibration settings

Export,? calibration string info

Export export calibration string from calibrated device

Example

Response

Export,?



Wait 300ms

1

Dec

10,120

ASCII

0

Null

Response breakdown

10, 120

of strings to export # of bytes to export

Export strings can be up to 12 characters long

Export



Wait 300ms

1

Dec

59 6F 75 20 61 72

ASCII

0

Null

(1 of 10)

Export



Wait 300ms

1

Dec

65 20 61 20 63 6F

ASCII

0

Null

(2 of 10)

(7 more)

⋮

Export



Wait 300ms

1

Dec

6F 6C 20 67 75 79

ASCII

0

Null

(10 of 10)

Export



Wait 300ms

1

Dec

*DONE

ASCII

0

Null

Import calibration

300ms  processing delay

Command syntax

Import: Use this command to upload calibration settings to one or more devices.

Import,n import calibration string to new device

Example

Import, 59 6F 75 20 61 72 (1 of 10)

Import, 65 20 61 20 63 6F (2 of 10)

⋮

Import, 6F 6C 20 67 75 79 (10 of 10)

Response


 **1** **0**
Wait 300ms Dec Null

 **1** **0**
Wait 300ms Dec Null

⋮


 **1** **0**
Wait 300ms Dec Null

Import,n

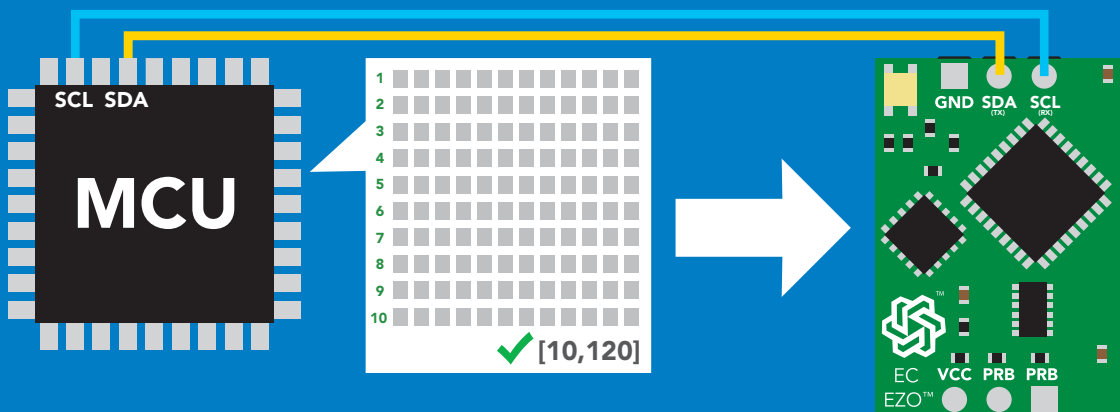

1 ***Pending** **0**
Dec ASCII Null

system will reboot

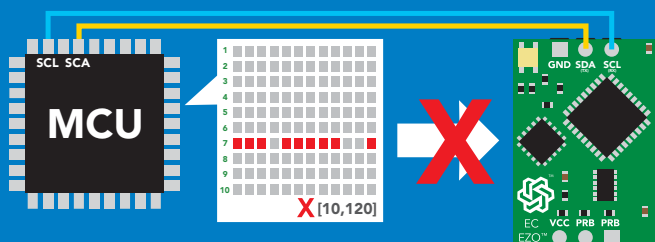

reboot

*** If one of the imported strings is not correctly entered, the device will not accept the import and reboot.**

Setting the probe type

Command syntax

300ms  processing delay

K,n n = any value; floating point in ASCII
K,? probe K value?

K 1.0 is the default value

Example

Response

K,10


Wait 300ms

1
Dec

0
Null

K,?


Wait 600ms

1
Dec

K,10
ASCII

0
Null



K 0.1



K 1.0



K 10

Temperature compensation

Command syntax

Default temperature = 25°C

Temperature is always in Celsius

Temperature is not retained if power is cut

T,n n = any value; floating point or int 300ms  processing delay

T,? compensated temperature value?

RT,n set temperature compensation and take a reading*

* This is a new command for firmware V2.13

Example

Response

T,19.5


 Wait 300ms 1 Dec 0 Null

RT,19.5


 Wait 900ms 1 Dec 8.91 ASCII 0 Null

T,?

 Wait 300ms 1 Dec ?T,19.5 ASCII 0 Null

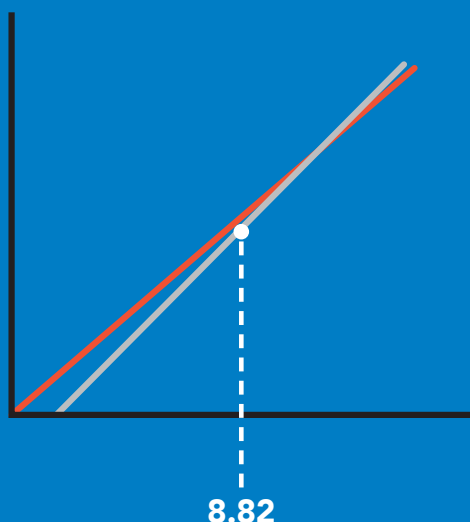

→
T,19.5

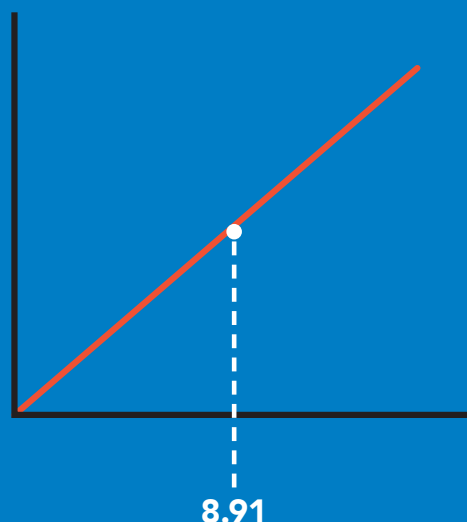

Enable/disable parameters from output string

Command syntax

300ms  processing delay

O, [parameter],[1,0]

enable or disable output parameter

O,?

enabled parameter?

Example

O,EC,1 / O,EC,0



Wait 300ms

1

Dec

0

Null

enable / disable conductivity

O,TDS,1 / O,TDS,0



Wait 300ms

1

Dec

0

Null

enable / disable total dissolved solids

O,S,1 / O,S,0



Wait 300ms

1

Dec

0

Null

enable / disable salinity

O,SG,1 / O,SG,0



Wait 300ms

1

Dec

0

Null

enable / disable specific gravity

O,?



Wait 300ms

1

Dec

?O,EC,TDS,S,SG

ASCII

0

Null

if all are enabled

Parameters

EC conductivity
TDS total dissolved solids
S salinity
SG specific gravity

Followed by 1 or 0

1 enabled
0 disabled

*** If you disable all possible data types your readings will display "no output".**

Naming device

300ms  processing delay

Command syntax

Do not use spaces in the name

Name,n	set name	n =	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Name,	clears name																	
Name,?	show name																	

Up to 16 ASCII characters

Example

Response

Name,



1 0
Dec Null

name has been cleared

Name,zzt



1 0
Dec Null



Name,?



1 ?Name,zzt 0
Dec ASCII Null

Name,zzt

Name,?

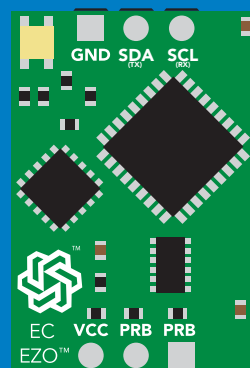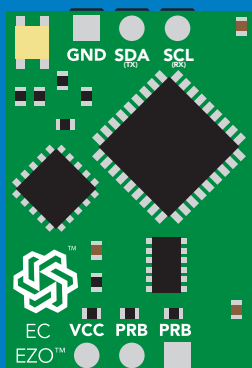

1 0

1 ?Name,zzt 0

Device information

Command syntax

300ms  processing delay

i device information

Example

i

Response



Wait 300ms

1

Dec

?i,EC, 2.10

ASCII

0

Null

Response breakdown

?i, EC, 2.10
↑ ↑
Device Firmware

Reading device status

Command syntax

300ms  processing delay

Status voltage at Vcc pin and reason for last restart

Example

Response

Status



1

Dec

?Status,P,5.038

ASCII

0

Null

Response breakdown

?Status,

P,

Reason for restart

5.038

Voltage at Vcc

Restart codes

P	powered off
S	software reset
B	brown out
W	watchdog
U	unknown

Sleep mode/low power

Command syntax

Sleep enter sleep mode/low power

Send any character or command to awaken device.


Example	Response
---------	----------

Sleep	no response
-------	-------------


Do not read status byte after issuing sleep command.

Any command	wakes up device
-------------	-----------------


5V	STANDBY 18.14 mA	SLEEP 0.7 mA
3.3V	16.85 mA	0.4 mA

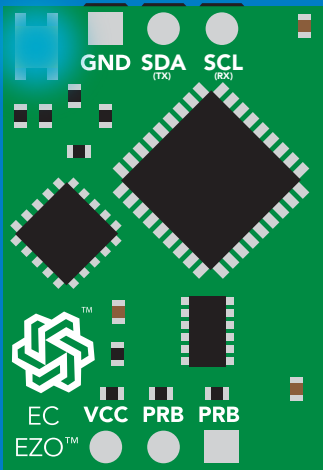

Standby

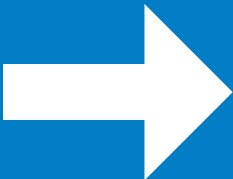

Sleep

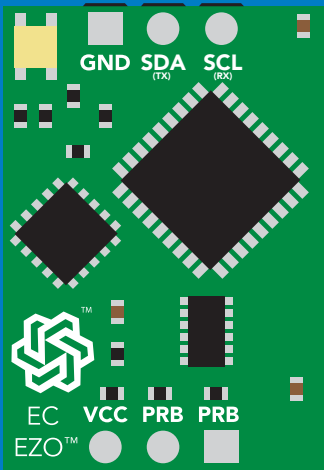

Sleep

Protocol lock

Command syntax

300ms  processing delay

Plock,1 enable Plock

Plock,0 disable Plock

Plock,? Plock on/off?

default

Locks device to I²C mode.

Example

Response

Plock,1

 Wait 300ms
1 0
Dec Null

Plock,0




 Wait 300ms
1 0
Dec Null

Plock,?

 Wait 300ms
1 ?Plock,1 0
Dec ASCII Null

Plock,1

Baud, 9600

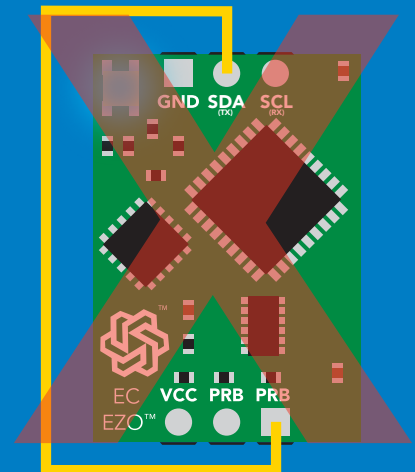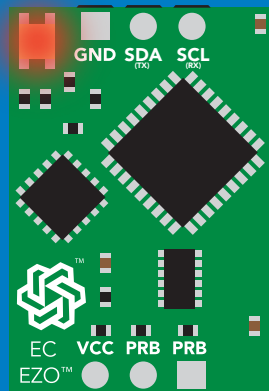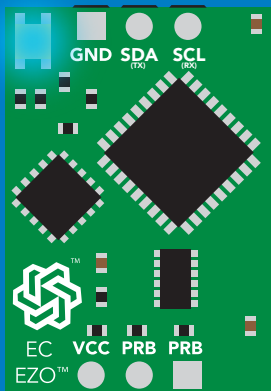

cannot change to UART

cannot change to UART

I²C address change

Command syntax

300ms  processing delay

I2C,n sets I²C address and reboots into I²C mode

Example

Response

I2C,101

device reboot
(no response given)


Warning!

Changing the I²C address will prevent communication between the circuit and the CPU until your CPU is updated with the new I²C address.


Default I²C address is 100 (0x64).

n = any number 1 – 127

I2C,101

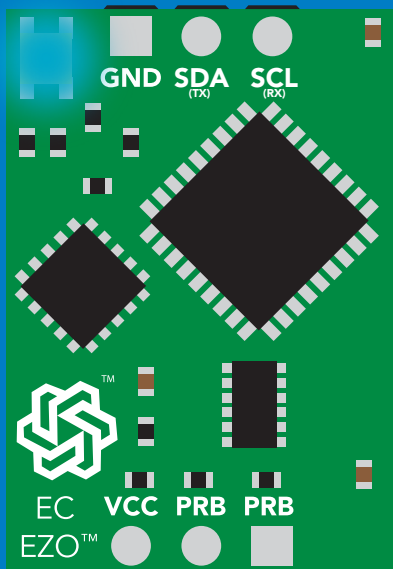

(reboot)

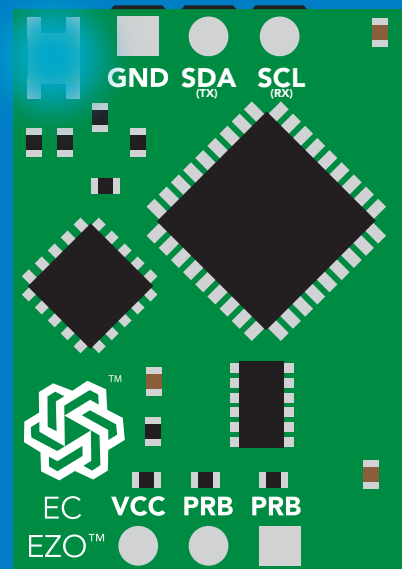

Factory reset

Command syntax

Factory reset will not take the device out of I²C mode.

Factory enable factory reset

I²C address will not change

Example



Response

Factory


device reboot
(no response given)

Clears calibration
LED on
Response codes enabled

Factory

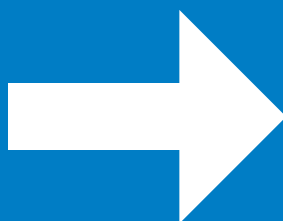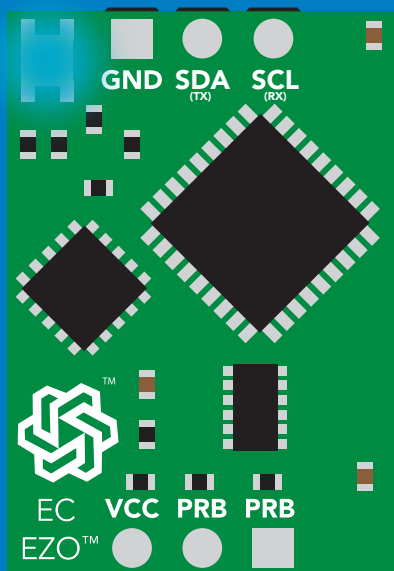

(reboot)

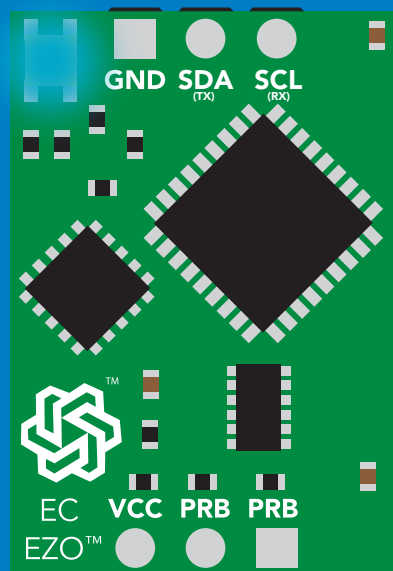

Change to UART mode

Command syntax

Baud,n switch from I²C to UART



Example

Baud,9600


Response

reboot in UART mode
(no response given)


n = [300
1200
2400
9600
19200
38400
57600
115200

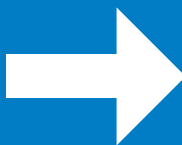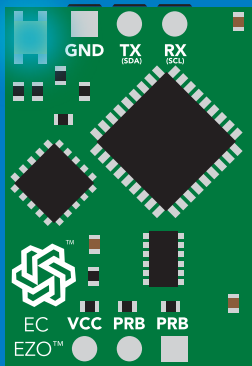


Baud,9600

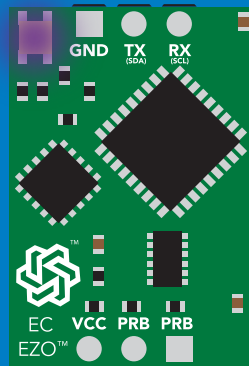

Changing to
UART mode

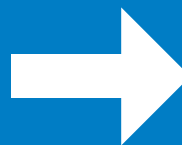


(reboot)

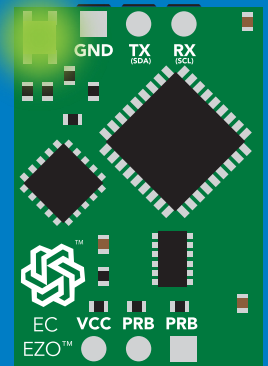


Manual switching to UART

- Disconnect ground (power off)
- Disconnect TX and RX
- Connect TX to the right PRB
- Confirm RX is disconnected
- Connect ground (power on)
- Wait for LED to change from Blue to Green
- Disconnect ground (power off)
- Reconnect all data and power


Example

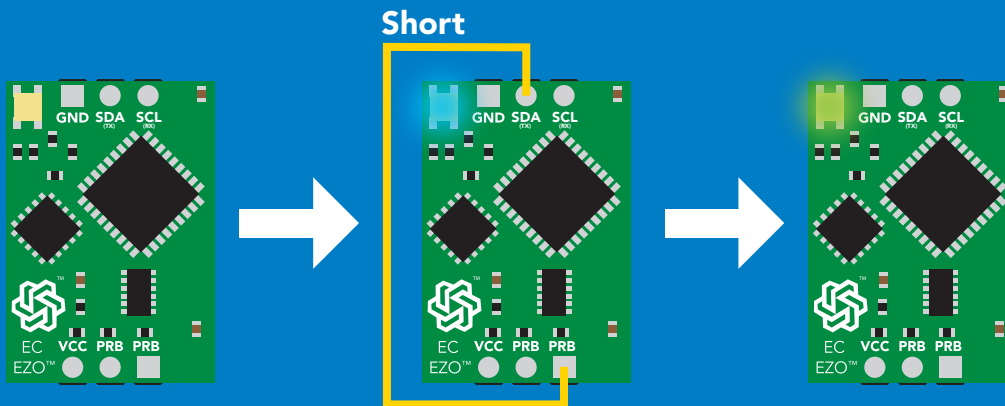


Wrong Example

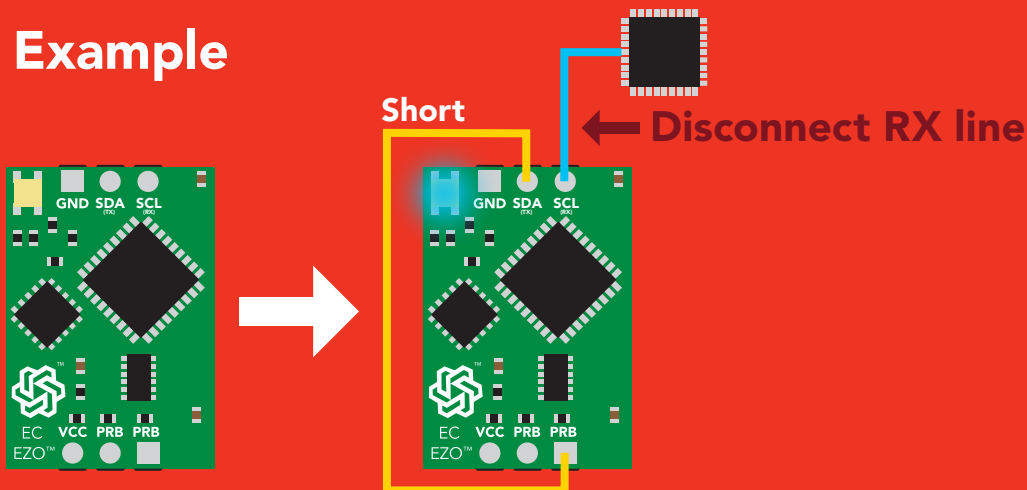


EZO™ circuit footprint

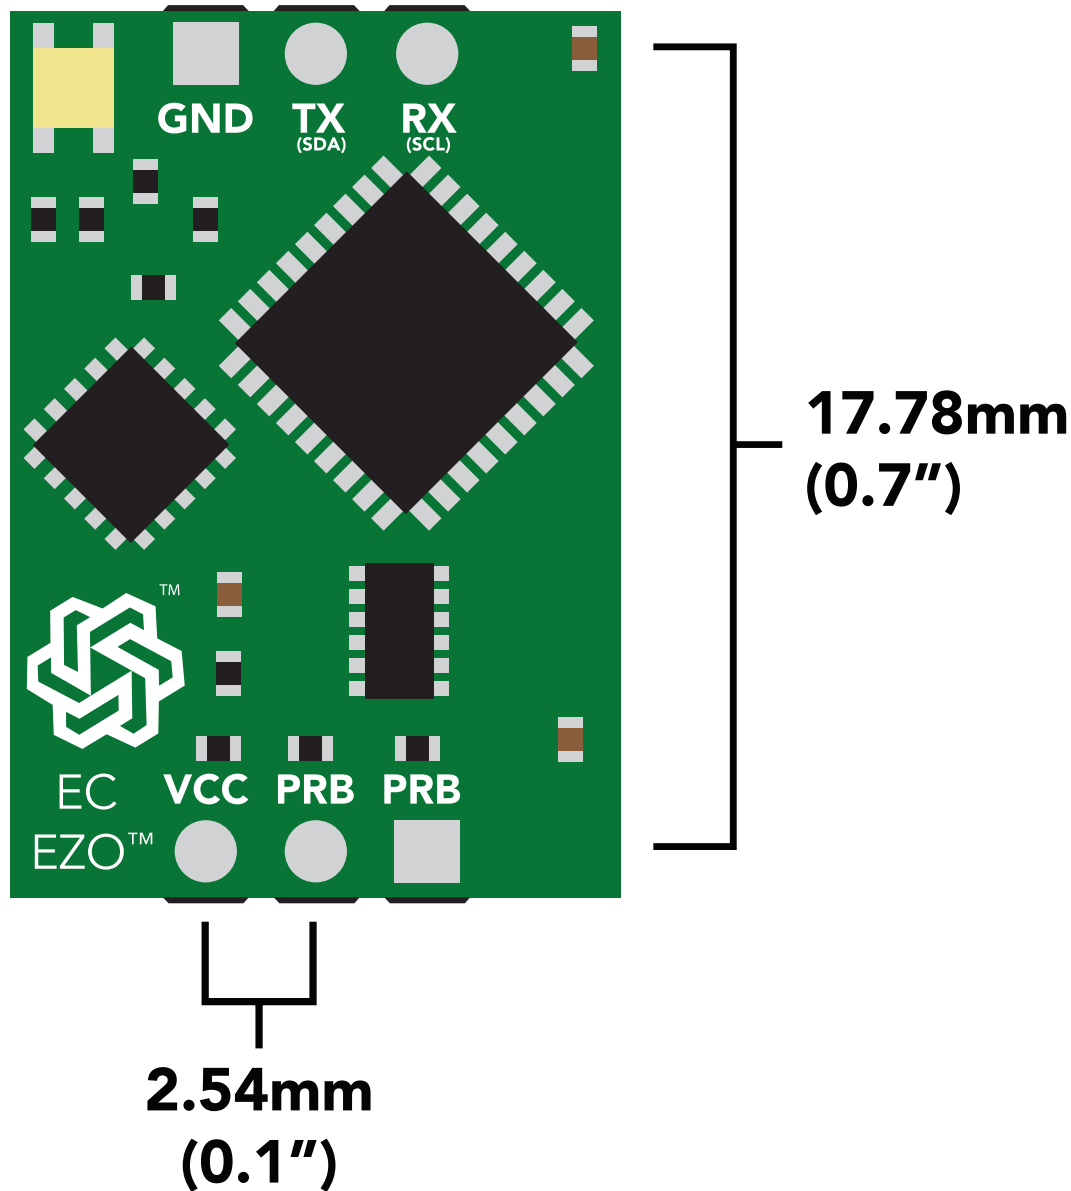


1 In your CAD software, place a 8 position header.

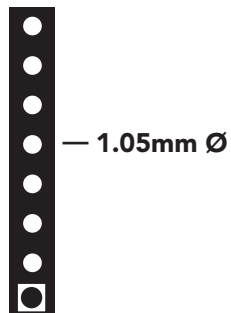

2 Place a 3 position header at both top and bottom of the 8 position.

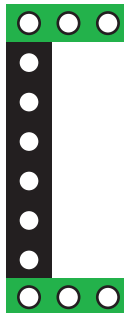

3 Delete the 8 position header. The two 3 position headers are now 17.78mm (0.7") apart from each other.

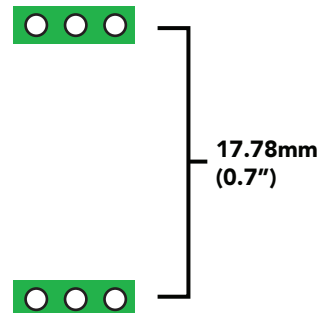

Datasheet change log

Datasheet V 6.3

Revised naming device info on pages 36 & 63.

Datasheet V 6.2

Added new command:

"TDS,n" Changing the TDS (ppm) conversion factor on pages 30 (UART) & 57 (I²C).

Datasheet V 6.1

Corrected typos within the datasheet.

Datasheet V 6.0

Changed the K value range from 0.1 to 0.01 on pg 5.

Datasheet V 5.9

Moved Default state to pg 17.

Datasheet V 5.8

Revised conductivity probe range information on pg 5.

Datasheet V 5.7

Revised response for the sleep command in UART mode on pg 39.

Datasheet V 5.6

Added more information on the Export calibration and Import calibration commands.

Datasheet V 5.5

Revised calibration theory pages, added information on temperature compensation on pg. 15, moved data isolation to pg 9, and correct wiring to pg 11.

Datasheet V 5.4

Revised isolation schematic on pg. 13

Datasheet V 5.3

Added new command:

"RT,n" for Temperature compensation located on pages 30 (UART) & 55 (I²C).

Added firmware information to Firmware update list.

Datasheet V 5.2

Revised calibration information on pages 27 & 52.

Datasheet V 5.1

Added more information about temperature compensation on pages 30 & 55.

Datasheet V 5.0

Changed "Max rate" to "Response time" on cover page.

Datasheet V 4.9

Removed note from certain commands about firmware version.
Added steps to calibration command pages 27 (UART) and 52 (I²C).

Datasheet V 4.8

Revised definition of response codes on pg 46.

Datasheet V 4.7

Revised cover page art.

Datasheet V 4.6

Updated calibration processing delay time on pg.52.

Datasheet V 4.5

Revised Enable/disable parameters information on pages 31 & 56.

Datasheet V 4.4

Updated High point calibration info on page 11.

Datasheet V 4.3

Updated calibration info on pages 27 (UART) and 52 (I²C).

Datasheet V 4.2

Revised Plock pages to show default value.

Datasheet V 4.1

Corrected I²C calibration delay on pg. 52.

Datasheet V 4.0

Revised entire datasheet.

Firmware updates

V1.0 – Initial release (April 17, 2014)

V1.1 – (June 2, 2014)

- Change specific gravity equation to return 1.0 when the uS reading is < 1000 (previously returned 0.0)
- Change accuracy of specific gravity from 2 decimal places to 3 decimal places
- Don't save temperature changes to EEPROM

V1.2 – (Aug 1, 2014)

- Baud rate change is now a long, purple blink

V1.5 – Baud rate change (Nov 6, 2014)

- Change default baud rate to 9600

V1.6 – I2C bug (Dec 1, 2014)

- Fixed I²C bug where the circuit may inappropriately respond when other I2C devices are connected

V1.8 – Factory (April 14, 2015)

- Changed "X" command to "Factory"

V1.95 – Plock (March 31, 2016)

- Added protocol lock feature "Plock"

V1.96 – EEPROM (April 26, 2016)

- Fixed bug where EEPROM would get erased if the circuit lost power 900ms into startup
This would cause the EZO circuit to revert back to UART mode if set to I2C

V2.10 – (April 12, 2017)

- Added "Find" command.
- Added "Export/import" command.
- Modified continuous mode to be able to send readings every "n" seconds.
- Default output changed from CSV string of 4 values to just conductivity; Other values must be enabled

V2.11 – (April 28, 2017)

- Fixed "Sleep" bug, where it would draw excessive current.

V2.12 – (May 9, 2017)

- Fixed bug in sleep mode, where circuit would wake up to a different I²C address.

V2.13 – (July 16, 2018)

- Added "RT" command to Temperature compensation

V2.14 – (Nov 26, 2019)

- The K value range has been extended to 0.01

V2.15 – (June 29, 2020)

- Fixed bug where output doesn't always round to 0

Warranty

Atlas Scientific™ Warranties the EZO™ class Conductivity circuit to be free of defect during the debugging phase of device implementation, or 30 days after receiving the EZO™ class Conductivity circuit (which ever comes first).

The debugging phase

The debugging phase as defined by Atlas Scientific™ is the time period when the EZO™ class Conductivity circuit is inserted into a bread board, or shield. If the EZO™ class Conductivity circuit is being debugged in a bread board, the bread board must be devoid of other components. If the EZO™ class Conductivity circuit is being connected to a microcontroller, the microcontroller must be running code that has been designed to drive the EZO™ class Conductivity circuit exclusively and output the EZO™ class Conductivity circuit data as a serial string.

It is important for the embedded systems engineer to keep in mind that the following activities will void the EZO™ class Conductivity circuit warranty:

- **Soldering any part of the EZO™ class Conductivity circuit.**
- **Running any code, that does not exclusively drive the EZO™ class Conductivity circuit and output its data in a serial string.**
- **Embedding the EZO™ class Conductivity circuit into a custom made device.**
- **Removing any potting compound.**

Reasoning behind this warranty

Because Atlas Scientific™ does not sell consumer electronics; once the device has been embedded into a custom made system, Atlas Scientific™ cannot possibly warranty the EZO™ class Conductivity circuit, against the thousands of possible variables that may cause the EZO™ class Conductivity circuit to no longer function properly.

Please keep this in mind:

- 1. All Atlas Scientific™ devices have been designed to be embedded into a custom made system by you, the embedded systems engineer.**
- 2. All Atlas Scientific™ devices have been designed to run indefinitely without failure in the field.**
- 3. All Atlas Scientific™ devices can be soldered into place, however you do so at your own risk.**

Atlas Scientific™ is simply stating that once the device is being used in your application, Atlas Scientific™ can no longer take responsibility for the EZO™ class Conductivity circuits continued operation. This is because that would be equivalent to Atlas Scientific™ taking responsibility over the correct operation of your entire device.